


# Cree® XLamp® XHP50 LEDs

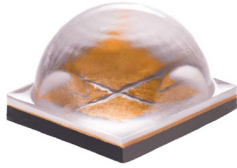

## PRODUCT DESCRIPTION

Powered by Cree’s groundbreaking SC5 Technology™ Platform, the XLamp XHP50 LED is a member of Cree’s Extreme High Power (XHP) class of LEDs that redefines lumen density and reliability to radically reduce system costs by up to 40 percent. At its maximum current, the XHP50 LED delivers twice the light output of the industry’s brightest single-die LED, the XLamp XM-L2 LED, with similar lumens per watt and without increasing the package footprint. The XHP50 LED also achieves longer lifetime at higher operating temperatures than previous LED technology. The result is significantly lower thermal, mechanical and optical costs at the system level.

## FEATURES

- Available in white, configurable to 6 V or 12 V by PCB layout
- Available in 5-step EasyWhite® bins at 3000 K to 5000 K CCT, 3-step EasyWhite bins at 2700 K to 5000 K and 2-step EasyWhite bins at 2700 K to 4000 K CCT
- Available in ANSI white bins at 3000 K to 7000 K CCT
- Available in standard, 70-, 80-, and 90-minimum CRI options
- Binned at 85 °C
- Maximum drive current: 3000 mA (6 V), 1500 mA (12 V)
- Low thermal resistance: 1.2 °C/W
- Wide viewing angle: 120°
- Unlimited floor life at ≤ 30 °C/85% RH
- Reflow solderable - JEDEC J-STD-020C
- RoHS and REACH compliant
- UL® recognized component (E349212)

## TABLE OF CONTENTS

|   |    |
|---|----|
| Characteristics .....   | 2  |
| Flux Characteristics, EasyWhite® Order Codes and Bins .....                                     | 3  |
| Flux Characteristics, ANSI White Order Codes and Bins .....                                     | 7  |
| Relative Spectral Power Distribution .....  | 11 |
| Relative Flux vs. Junction Temperature....  | 11 |
| Electrical Characteristics.....   | 12 |
| Relative Flux vs. Current.....  | 13 |
| Relative Chromaticity vs Current.....   | 14 |
| Relative Chromaticity vs Temperature.....   | 15 |
| Typical Spatial Distribution.....   | 15 |
| Thermal Design.....   | 16 |
| Performance Groups – Luminous Flux.....   | 17 |
| Performance Groups – Chromaticity.....  | 17 |
| Cree’s Standard White Chromaticity Regions Plotted on the 1931 CIE Curve....                    | 21 |
| Cree’s Standard Cool White Kits Plotted on ANSI Standard Chromaticity Regions..                 | 24 |
| Cree’s Standard Warm and Neutral White Kits Plotted on ANSI Standard Chromaticity Regions ..... | 25 |
| Bin and Order-Code Formats.....   | 26 |
| Reflow Soldering Characteristics.....   | 27 |
| Notes .....   | 28 |
| Mechanical Dimensions .....   | 30 |
| Electrical Configuration .....  | 32 |
| Tape and Reel.....  | 32 |
| Packaging.....  | 33 |



## CHARACTERISTICS

XHP50 LEDs are tested and binned in production in the 12-V configuration. See the Mechanical Dimensions section on page 30 for pad layout options.

| Characteristics                              | Unit    | Minimum | Typical | Maximum |
|--|---------|---------|---------|---------|
| Thermal resistance, junction to solder point | °C/W    |         | 1.2     |         |
| Viewing angle (FWHM)                         | degrees |         | 120     |         |
| Temperature coefficient of voltage (6 V)*    | mV/°C   |         | -4.5    |         |
| Temperature coefficient of voltage (12 V)    | mV/°C   |         | -9      |         |
| ESD withstand voltage (HBM per Mil-Std-883D) | V       |         |         | 8000    |
| DC forward current (6 V)*                    | mA      |         |         | 3000    |
| DC forward current (12 V)                    | mA      |         |         | 1500    |
| Reverse voltage                              | V       |         |         | -5      |
| Forward voltage (6 V, @ 1400 mA, 85 °C)*     | V       |         | 5.75    | 6.3     |
| Forward voltage (12 V, @ 700 mA, 85 °C)      | V       |         | 11.5    | 12.6    |
| LED junction temperature                     | °C      |         |         | 150     |

**Note:**

\* Data for the 6-V configuration is calculated and for reference only.

**FLUX CHARACTERISTICS, EASYWHITE® ORDER CODES AND BINS**

The following table provides order codes for XLamp XHP50 LEDs. For a complete description of how the flux and chromaticity groups are reflected in the bin code and order code nomenclature, please see the Bin and Order Code Formats section (page 26).

Binning condition:  $T_j = 85\text{ }^\circ\text{C}$ ; 12 V,  $I_f = 700\text{ mA}$   
 Reference condition:  $T_j = 85\text{ }^\circ\text{C}$ ; 6 V,  $I_f = 1400\text{ mA}$

| Nominal CCT | CRI |     | Minimum Luminous Flux |                   |                    | 2-Step |            | 3-Step |                          | 5-Step |                          |
|-------------|-----|-----|-----------------------|-------------------|--------------------|--------|------------|--------|--------------------------|--------|--------------------------|
|             | Min | Typ | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* | Group  | Order Code | Group  | Order Code               | Group  | Order Code               |
| 5000 K      | 70  |     | J4                    | 1120              | 1284               |        |            |        |                          | 50E    | XHP50A-00-0000-0D0BJ450E |
|             |     |     | J2                    | 1040              | 1192               |        |            |        |                          |        | XHP50A-00-0000-0D0BJ250E |
|             |     |     | H4                    | 970               | 1112               |        |            |        |                          |        | XHP50A-00-0000-0D0BH450E |
|             | 80  |     | J2                    | 1040              | 1192               |        |            | 50G    | XHP50A-00-0000-0D0HJ250G |        |                          |
|             |     |     | H4                    | 970               | 1112               |        |            |        | XHP50A-00-0000-0D0HH450G |        |                          |
|             |     |     | H2                    | 900               | 1032               |        |            |        | XHP50A-00-0000-0D0HH250G |        |                          |
|             | 90  |     | H2                    | 900               | 1032               |        |            | 50G    | XHP50A-00-0000-0D0UH250G |        |                          |
|             |     |     | G4                    | 840               | 963                |        |            |        | XHP50A-00-0000-0D0UG450G |        |                          |
|             |     |     | G2                    | 780               | 894                |        |            |        | XHP50A-00-0000-0D0UG250G |        |                          |
|             |     |     | F4                    | 730               | 837                |        |            |        | XHP50A-00-0000-0D0UF450G |        |                          |
|             |     |     | F2                    | 680               | 780                |        |            |        | XHP50A-00-0000-0D0UF250G |        |                          |

- Notes**
- Cree maintains a tolerance of  $\pm 7\%$  on flux and power measurements,  $\pm 0.005$  on chromaticity (CCx, CCy) measurements and a tolerance of  $\pm 2$  on CRI measurements. See the Measurements section (page 28).
  - Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
  - \* Flux values @ 25 °C are calculated and for reference only.

**FLUX CHARACTERISTICS, EASYWHITE® ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | CRI    |     | Minimum Luminous Flux |                   |                    | 2-Step                   |                          | 3-Step |                          | 5-Step |                          |                          |
|-------------|--------|-----|-----------------------|-------------------|--------------------|--------------------------|--------------------------|--------|--------------------------|--------|--------------------------|--------------------------|
|             | Min    | Typ | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* | Group                    | Order Code               | Group  | Order Code               | Group  | Order Code               |                          |
| 4500 K      | 70     |     | J4                    | 1120              | 1284               |                          |                          |        |                          | 45E    | XHP50A-00-0000-0D0BJ445E |                          |
|             |        |     | J2                    | 1040              | 1192               |                          |                          |        |                          |        | XHP50A-00-0000-0D0BJ245E |                          |
|             |        |     | H4                    | 970               | 1112               |                          |                          |        |                          |        | XHP50A-00-0000-0D0BH445E |                          |
|             | 80     |     | H4                    | 970               | 1112               |                          |                          | 45G    | XHP50A-00-0000-0D0HH445G |        |                          |                          |
|             |        |     | H2                    | 900               | 1032               |                          |                          |        | XHP50A-00-0000-0D0HH245G |        |                          |                          |
|             |        |     | G4                    | 840               | 963                |                          |                          |        | XHP50A-00-0000-0D0HG445G |        |                          |                          |
|             | 90     |     | G4                    | 840               | 963                |                          |                          | 45G    | XHP50A-00-0000-0D0UG445G |        |                          |                          |
|             |        |     | G2                    | 780               | 894                |                          |                          |        | XHP50A-00-0000-0D0UG245G |        |                          |                          |
|             |        |     | F4                    | 730               | 837                |                          |                          |        | XHP50A-00-0000-0D0UF445G |        |                          |                          |
|             |        |     | F2                    | 680               | 780                |                          |                          |        | XHP50A-00-0000-0D0UF245G |        |                          |                          |
|             | 4000 K | 70  |                       | J4                | 1120               | 1284                     |                          |        |                          |        | 40E                      | XHP50A-00-0000-0D0BJ440E |
|             |        |     |                       | J2                | 1040               | 1192                     |                          |        |                          |        |                          | XHP50A-00-0000-0D0BJ240E |
| H4          |        |     |                       | 970               | 1112               | XHP50A-00-0000-0D0BH440E |                          |        |                          |        |                          |                          |
| 80          |        |     | H4                    | 970               | 1112               | 40H                      | XHP50A-00-0000-0D0HH440H | 40G    | XHP50A-00-0000-0D0HH440G |        |                          |                          |
|             |        |     | H2                    | 900               | 1032               | XHP50A-00-0000-0D0HH240H | XHP50A-00-0000-0D0HH240G |        |                          |        |                          |                          |
|             |        |     | G4                    | 840               | 963                | XHP50A-00-0000-0D0HG440H | XHP50A-00-0000-0D0HG440G |        |                          |        |                          |                          |
| 90          |        |     | G4                    | 840               | 963                | 40H                      | XHP50A-00-0000-0D0UG440H | 40G    | XHP50A-00-0000-0D0UG440G |        |                          |                          |
|             |        |     | G2                    | 780               | 894                | XHP50A-00-0000-0D0UG240H | XHP50A-00-0000-0D0UG240G |        |                          |        |                          |                          |
|             |        |     | F4                    | 730               | 837                | XHP50A-00-0000-0D0UF440H | XHP50A-00-0000-0D0UF440G |        |                          |        |                          |                          |
|             |        |     | F2                    | 680               | 780                | XHP50A-00-0000-0D0UF240H | XHP50A-00-0000-0D0UF240G |        |                          |        |                          |                          |

- Notes**
- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 28).
  - Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
  - \* Flux values @ 25 °C are calculated and for reference only.

**FLUX CHARACTERISTICS, EASYWHITE® ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | CRI    |     | Minimum Luminous Flux |                   |                    | 2-Step |                          | 3-Step |                          | 5-Step |                          |                          |
|-------------|--------|-----|-----------------------|-------------------|--------------------|--------|--------------------------|--------|--------------------------|--------|--------------------------|--------------------------|
|             | Min    | Typ | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* | Group  | Order Code               | Group  | Order Code               | Group  | Order Code               |                          |
| 3500 K      | 70     |     | H4                    | 970               | 1112               |        |                          |        |                          | 35E    | XHP50A-00-0000-0D0BH435E |                          |
|             |        |     | H2                    | 900               | 1032               |        |                          |        |                          |        | XHP50A-00-0000-0D0BH235E |                          |
|             | 80     |     | H4                    | 970               | 1112               | 35H    | XHP50A-00-0000-0D0HH435H | 35G    | XHP50A-00-0000-0D0HH435G |        |                          |                          |
|             |        |     | H2                    | 900               | 1032               |        | XHP50A-00-0000-0D0HH235H |        | XHP50A-00-0000-0D0HH235G |        |                          |                          |
|             |        |     | G4                    | 840               | 963                |        | XHP50A-00-0000-0D0HG435H |        | XHP50A-00-0000-0D0HG435G |        |                          |                          |
|             | 90     |     | G4                    | 840               | 963                | 35H    | XHP50A-00-0000-0D0UG435H | 35G    | XHP50A-00-0000-0D0UG435G |        |                          |                          |
|             |        |     | G2                    | 780               | 894                |        | XHP50A-00-0000-0D0UG235H |        | XHP50A-00-0000-0D0UG235G |        |                          |                          |
|             |        |     | F4                    | 730               | 837                |        | XHP50A-00-0000-0D0UF435H |        | XHP50A-00-0000-0D0UF435G |        |                          |                          |
|             |        |     | F2                    | 680               | 780                |        | XHP50A-00-0000-0D0UF235H |        | XHP50A-00-0000-0D0UF235G |        |                          |                          |
|             | 3000 K | 70  |                       | H4                | 970                | 1112   |                          |        |                          |        | 30E                      | XHP50A-00-0000-0D0BH430E |
|             |        |     |                       | H2                | 900                | 1032   |                          |        |                          |        |                          | XHP50A-00-0000-0D0BH230E |
|             |        |     |                       | G4                | 840                | 963    |                          |        |                          |        |                          | XHP50A-00-0000-0D0BG430E |
| 80          |        |     | H4                    | 970               | 1112               | 30H    | XHP50A-00-0000-0D0HH430H | 30G    | XHP50A-00-0000-0D0HH430G |        |                          |                          |
|             |        |     | H2                    | 900               | 1032               |        | XHP50A-00-0000-0D0HH230H |        | XHP50A-00-0000-0D0HH230G |        |                          |                          |
|             |        |     | G4                    | 840               | 963                |        | XHP50A-00-0000-0D0HG430H |        | XHP50A-00-0000-0D0HG430G |        |                          |                          |
|             |        |     | G2                    | 780               | 894                |        | XHP50A-00-0000-0D0HG230H |        | XHP50A-00-0000-0D0HG230G |        |                          |                          |
| 90          |        |     | G2                    | 780               | 894                | 30H    | XHP50A-00-0000-0D0UG230H | 30G    | XHP50A-00-0000-0D0UG230G |        |                          |                          |
|             |        |     | F4                    | 730               | 837                |        | XHP50A-00-0000-0D0UF430H |        | XHP50A-00-0000-0D0UF430G |        |                          |                          |
|             |        |     | F2                    | 680               | 780                |        | XHP50A-00-0000-0D0UF230H |        | XHP50A-00-0000-0D0UF230G |        |                          |                          |
|             |        |     | E4                    | 635               | 728                |        | XHP50A-00-0000-0D0UE430H |        | XHP50A-00-0000-0D0UE430G |        |                          |                          |

- Notes**
- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 28).
  - Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
  - \* Flux values @ 25 °C are calculated and for reference only.

**FLUX CHARACTERISTICS, EASYWHITE® ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | CRI |     | Minimum Luminous Flux |                   |                    | 2-Step |                          | 3-Step |                          | 5-Step |            |
|-------------|-----|-----|-----------------------|-------------------|--------------------|--------|--------------------------|--------|--------------------------|--------|------------|
|             | Min | Typ | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* | Group  | Order Code               | Group  | Order Code               | Group  | Order Code |
| 2700 K      | 80  |     | H2                    | 900               | 1032               | 27H    | XHP50A-00-0000-0D0HH227H | 27G    | XHP50A-00-0000-0D0HH227G |        |            |
|             |     |     | G4                    | 840               | 963                |        | XHP50A-00-0000-0D0HG427H |        | XHP50A-00-0000-0D0HG427G |        |            |
|             |     |     | G2                    | 780               | 894                |        | XHP50A-00-0000-0D0HG227H |        | XHP50A-00-0000-0D0HG227G |        |            |
|             | 90  |     | F4                    | 730               | 837                | 27H    | XHP50A-00-0000-0D0UF427H | 27G    | XHP50A-00-0000-0D0UF427G |        |            |
|             |     |     | F2                    | 680               | 780                |        | XHP50A-00-0000-0D0UF227H |        | XHP50A-00-0000-0D0UF227G |        |            |
|             |     |     | E4                    | 635               | 728                |        | XHP50A-00-0000-0D0UE427H |        | XHP50A-00-0000-0D0UE427G |        |            |

**Notes**

- Cree maintains a tolerance of  $\pm 7\%$  on flux and power measurements,  $\pm 0.005$  on chromaticity (CCx, CCy) measurements and a tolerance of  $\pm 2$  on CRI measurements. See the Measurements section (page 28).
- Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
- \* Flux values @ 25 °C are calculated and for reference only.

## FLUX CHARACTERISTICS, ANSI WHITE ORDER CODES AND BINS

The following table provides order codes for XLamp XHP50 LEDs. For a complete description of how the flux and chromaticity groups are reflected in the bin code and order code nomenclature, please see the Bin and Order Code Formats section (page 26).

Binning condition:  $T_j = 85\text{ °C}$ ; 12 V,  $I_f = 700\text{ mA}$

Reference condition:  $T_j = 85\text{ °C}$ ; 6 V,  $I_f = 1400\text{ mA}$

| Nominal CCT | Chromaticity Regions   | CRI    |  | Minimum Luminous Flux |                   |                    | Order Code                |                           |                           |
|-------------|--|--------|--|-----------------------|-------------------|--------------------|---------------------------|---------------------------|---------------------------|
|             |  | Min    | Typ  | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* |                           |                           |                           |
| 7000 K      | 0A, 0B, 0C, 0D, 0R, 0S, 0T, 0U, 1A, 1B, 1C, 1D, 1R, 1S, 1T, 1U | 0      | 68   | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00J40DT  |                           |                           |
|             |  |        |  | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20DT  |                           |                           |
|             |  | 70     |  | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00BJ40DT |                           |                           |
|             |  |        |  | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00BJ20DT |                           |                           |
|             |  | 80     |  |                       | J2                | 1040               | 1192                      | XHP50A-00-0000-0D00HJ20DT |                           |
|             |  |        |  |                       | H4                | 970                | 1112                      | XHP50A-00-0000-0D00HH40DT |                           |
|             |  |        |  |                       | H2                | 900                | 1032                      | XHP50A-00-0000-0D00HH20DT |                           |
|             |  | 90     |  |                       |                   | H2                 | 900                       | 1032                      | XHP50A-00-0000-0D00UH20DT |
|             |  |        |  |                       |                   | G4                 | 840                       | 963                       | XHP50A-00-0000-0D00UG40DT |
|             |  |        |  |                       |                   | G2                 | 780                       | 894                       | XHP50A-00-0000-0D00UG20DT |
|             |  |        |  |                       |                   | F4                 | 730                       | 837                       | XHP50A-00-0000-0D00UF40DT |
|             |  | 6500 K | 0A, 0B, 0C, 0D, 0R, 0S, 0T, 0U, 1A, 1B, 1C, 1D, 1R, 1S, 1T, 1U, 2A, 2B, 2C, 2D, 2R, 2S, 2T, 2U | 0                     | 68                | J4                 | 1120                      | 1284                      | XHP50A-00-0000-0D00J40CB  |
| J2          | 1040   |        |  |                       |                   | 1192               | XHP50A-00-0000-0D00J20CB  |                           |                           |
| 70          |  |        |  |                       | J4                | 1120               | 1284                      | XHP50A-00-0000-0D00BJ40CB |                           |
|             |  |        |  |                       | J2                | 1040               | 1192                      | XHP50A-00-0000-0D00BJ20CB |                           |
| 80          |  |        |  |                       | J2                | 1040               | 1192                      | XHP50A-00-0000-0D00HJ20CB |                           |
|             |  |        |  |                       | H4                | 970                | 1112                      | XHP50A-00-0000-0D00HH40CB |                           |
|             |  |        |  |                       | H2                | 900                | 1032                      | XHP50A-00-0000-0D00HH20CB |                           |
| 90          |  |        |  |                       |                   | H2                 | 900                       | 1032                      | XHP50A-00-0000-0D00UH20CB |
|             |  |        |  |                       |                   | G4                 | 840                       | 963                       | XHP50A-00-0000-0D00UG40CB |
|             |  |        |  |                       |                   | G2                 | 780                       | 894                       | XHP50A-00-0000-0D00UG20CB |
|             |  |        |  |                       |                   | F4                 | 730                       | 837                       | XHP50A-00-0000-0D00UF40CB |

### Notes

- Cree maintains a tolerance of  $\pm 7\%$  on flux and power measurements,  $\pm 0.005$  on chromaticity (CCx, CCy) measurements and a tolerance of  $\pm 2$  on CRI measurements. See the Measurements section (page 28).
- Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
- \* Flux values @ 25 °C are calculated and for reference only.

**FLUX CHARACTERISTICS, ANSI WHITE ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | Chromaticity Regions  | CRI |     | Minimum Luminous Flux |                   |                    | Order Code               |                          |
|-------------|---|-----|-----|-----------------------|-------------------|--------------------|--------------------------|--------------------------|
|             |   | Min | Typ | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* |                          |                          |
| 6500 K      | 1A, 1B, 1C, 1D  | 0   | 68  | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00J40E1 |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20E1 |                          |
|             |   | 70  |     | J4                    | 1120              | 1284               | XHP50A-00-0000-0D0BJ40E1 |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D0BJ20E1 |                          |
|             |   | 80  |     |                       | J2                | 1040               | 1192                     | XHP50A-00-0000-0D0HJ20E1 |
|             |   |     |     |                       | H4                | 970                | 1112                     | XHP50A-00-0000-0D0HH40E1 |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0HH20E1 |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0UH20E1 |
|             |   | 90  |     |                       | G4                | 840                | 963                      | XHP50A-00-0000-0D0UG40E1 |
|             |   |     |     |                       | G2                | 780                | 894                      | XHP50A-00-0000-0D0UG20E1 |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40E1 |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40E1 |
| 6000 K      | 1A, 1B, 1C, 1D,<br>1R, 1S, 1T, 1U,<br>2A, 2B, 2C, 2D,<br>2R, 2S, 2T, 2U | 0   | 68  | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00J40DV |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20DV |                          |
|             |   | 70  |     | J4                    | 1120              | 1284               | XHP50A-00-0000-0D0BJ40DV |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D0BJ20DV |                          |
|             |   | 80  |     |                       | J2                | 1040               | 1192                     | XHP50A-00-0000-0D0HJ20DV |
|             |   |     |     |                       | H4                | 970                | 1112                     | XHP50A-00-0000-0D0HH40DV |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0HH20DV |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0UH20DV |
|             |   | 90  |     |                       | G4                | 840                | 963                      | XHP50A-00-0000-0D0UG40DV |
|             |   |     |     |                       | G2                | 780                | 894                      | XHP50A-00-0000-0D0UG20DV |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40DV |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40DV |
| 5700 K      | 2A, 2B, 2C, 2D  | 0   | 68  | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00J40E2 |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20E2 |                          |
|             |   | 70  |     | J4                    | 1120              | 1284               | XHP50A-00-0000-0D0BJ40E2 |                          |
|             |   |     |     | J2                    | 1040              | 1192               | XHP50A-00-0000-0D0BJ20E2 |                          |
|             |   | 80  |     |                       | J2                | 1040               | 1192                     | XHP50A-00-0000-0D0HJ20E2 |
|             |   |     |     |                       | H4                | 970                | 1112                     | XHP50A-00-0000-0D0HH40E2 |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0HH20E2 |
|             |   |     |     |                       | H2                | 900                | 1032                     | XHP50A-00-0000-0D0UH20E2 |
|             |   | 90  |     |                       | G4                | 840                | 963                      | XHP50A-00-0000-0D0UG40E2 |
|             |   |     |     |                       | G2                | 780                | 894                      | XHP50A-00-0000-0D0UG20E2 |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40E2 |
|             |   |     |     |                       | F4                | 730                | 837                      | XHP50A-00-0000-0D0UF40E2 |



**FLUX CHARACTERISTICS, ANSI WHITE ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | Chromaticity Regions | CRI    |                | Minimum Luminous Flux |                   |                    | Order Code               |      |                          |
|-------------|----------------------|--------|----------------|-----------------------|-------------------|--------------------|--------------------------|------|--------------------------|
|             |                      | Min    | Typ            | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* |                          |      |                          |
| 5000 K      | 3A, 3B, 3C, 3D       | 0      | 68             | J4                    | 1120              | 1284               | XHP50A-00-0000-0D00J40E3 |      |                          |
|             |                      |        |                | J2                    | 1040              | 1192               | HP50A-00-0000-0D00J20E3  |      |                          |
|             |                      |        |                | H4                    | 970               | 1112               | XHP50A-00-0000-0D00H40E3 |      |                          |
|             |                      | 70     |                |                       |                   | J4                 | 1120                     | 1284 | XHP50A-00-0000-0D0BJ40E3 |
|             |                      |        |                |                       |                   | J2                 | 1040                     | 1192 | XHP50A-00-0000-0D0BJ20E3 |
|             |                      |        |                |                       |                   | H4                 | 970                      | 1112 | XHP50A-00-0000-0D0BH40E3 |
|             |                      | 80     |                |                       |                   | J2                 | 1040                     | 1192 | XHP50A-00-0000-0D0HJ20E3 |
|             |                      |        |                |                       |                   | H4                 | 970                      | 1112 | XHP50A-00-0000-0D0HH40E3 |
|             |                      |        |                |                       |                   | H2                 | 900                      | 1032 | XHP50A-00-0000-0D0HH20E3 |
|             |                      | 90     |                |                       |                   | H2                 | 900                      | 1032 | XHP50A-00-0000-0D0UH20E3 |
|             |                      |        |                |                       |                   | G4                 | 840                      | 963  | XHP50A-00-0000-0D0UG40E3 |
|             |                      |        |                |                       |                   | G2                 | 780                      | 894  | XHP50A-00-0000-0D0UG20E3 |
|             |                      |        |                |                       |                   | F4                 | 730                      | 837  | XHP50A-00-0000-0D0UF40E3 |
|             |                      |        |                |                       |                   | F2                 | 680                      | 780  | XHP50A-00-0000-0D0UF20E3 |
|             |                      | 4500 K | 4A, 4B, 4C, 4D | 0                     | 68                | J4                 | 1120                     | 1284 | XHP50A-00-0000-0D00J40E4 |
| J2          | 1040                 |        |                |                       |                   | 1192               | XHP50A-00-0000-0D00J20E4 |      |                          |
| H4          | 970                  |        |                |                       |                   | 1112               | XHP50A-00-0000-0D00H40E4 |      |                          |
| 70          |                      |        |                |                       |                   | J4                 | 1120                     | 1284 | XHP50A-00-0000-0D0BJ40E4 |
|             |                      |        |                |                       |                   | J2                 | 1040                     | 1192 | XHP50A-00-0000-0D0BJ20E4 |
|             |                      |        |                |                       |                   | H4                 | 970                      | 1112 | XHP50A-00-0000-0D0BH40E4 |
| 80          |                      |        |                |                       |                   | H4                 | 970                      | 1112 | XHP50A-00-0000-0D0HH40E4 |
|             |                      |        |                |                       |                   | H2                 | 900                      | 1032 | XHP50A-00-0000-0D0HH20E4 |
|             |                      |        |                |                       |                   | G4                 | 840                      | 963  | XHP50A-00-0000-0D0HG40E4 |
| 90          |                      |        |                |                       |                   | G4                 | 840                      | 963  | XHP50A-00-0000-0D0UG40E4 |
|             |                      |        |                |                       |                   | G2                 | 780                      | 894  | XHP50A-00-0000-0D0UG20E4 |
|             |                      |        |                |                       |                   | F4                 | 730                      | 837  | XHP50A-00-0000-0D0UF40E4 |
|             |                      |        |                |                       |                   | F2                 | 680                      | 780  | XHP50A-00-0000-0D0UF20E4 |


- Notes**
- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 28).
  - Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
  - \* Flux values @ 25 °C are calculated and for reference only.

**FLUX CHARACTERISTICS, ANSI WHITE ORDER CODES AND BINS - CONTINUED**

| Nominal CCT | Chromaticity Regions | CRI    |                | Minimum Luminous Flux |                   |                    | Order Code               |
|-------------|----------------------|--------|----------------|-----------------------|-------------------|--------------------|--------------------------|
|             |                      | Min    | Typ            | Group                 | Flux (lm) @ 85 °C | Flux (lm) @ 25 °C* |                          |
| 4000 K      | 5A, 5B, 5C, 5D       | 0      | 68             | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20E5 |
|             |                      |        |                | H4                    | 970               | 1112               | XHP50A-00-0000-0D00H40E5 |
|             |                      | 70     |                | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20E5 |
|             |                      |        |                | H4                    | 970               | 1112               | XHP50A-00-0000-0D00H40E5 |
|             |                      | 80     |                | H4                    | 970               | 1112               | XHP50A-00-0000-0D00H40E5 |
|             |                      |        |                | H2                    | 900               | 1032               | XHP50A-00-0000-0D00H20E5 |
|             |                      |        |                | G4                    | 840               | 963                | XHP50A-00-0000-0D00G40E5 |
|             |                      | 90     |                | G4                    | 840               | 963                | XHP50A-00-0000-0D00G40E5 |
|             |                      |        |                | G2                    | 780               | 894                | XHP50A-00-0000-0D00G20E5 |
|             |                      |        |                | F4                    | 730               | 837                | XHP50A-00-0000-0D00F40E5 |
|             |                      |        |                | F2                    | 680               | 780                | XHP50A-00-0000-0D00F20E5 |
|             |                      | 3500 K | 6A, 6B, 6C, 6D | 70                    |                   | J2                 | 1040                     |
| H4          | 970                  |        |                |                       |                   | 1112               | XHP50A-00-0000-0D00H40E6 |
| H2          | 900                  |        |                |                       |                   | 1032               | XHP50A-00-0000-0D00H20E6 |
| 3000 K      | 7A, 7B, 7C, 7D       | 70     |                | J2                    | 1040              | 1192               | XHP50A-00-0000-0D00J20E7 |
|             |                      |        |                | H4                    | 970               | 1112               | XHP50A-00-0000-0D00H40E7 |
|             |                      |        |                | H2                    | 900               | 1032               | XHP50A-00-0000-0D00H20E7 |
|             |                      |        |                | G4                    | 840               | 963                | XHP50A-00-0000-0D00G40E7 |


- Notes**
- Cree maintains a tolerance of ±7% on flux and power measurements, ±0.005 on chromaticity (CCx, CCy) measurements and a tolerance of ±2 on CRI measurements. See the Measurements section (page 28).
  - Cree XLamp XHP50 LED order codes specify only a minimum flux bin and not a maximum. Cree may ship reels in flux bins higher than the minimum specified by the order code without advance notice. Shipments will always adhere to the chromaticity bin restrictions specified by the order code.
  - \* Flux values @ 25 °C are calculated and for reference only.

**RELATIVE SPECTRAL POWER DISTRIBUTION**


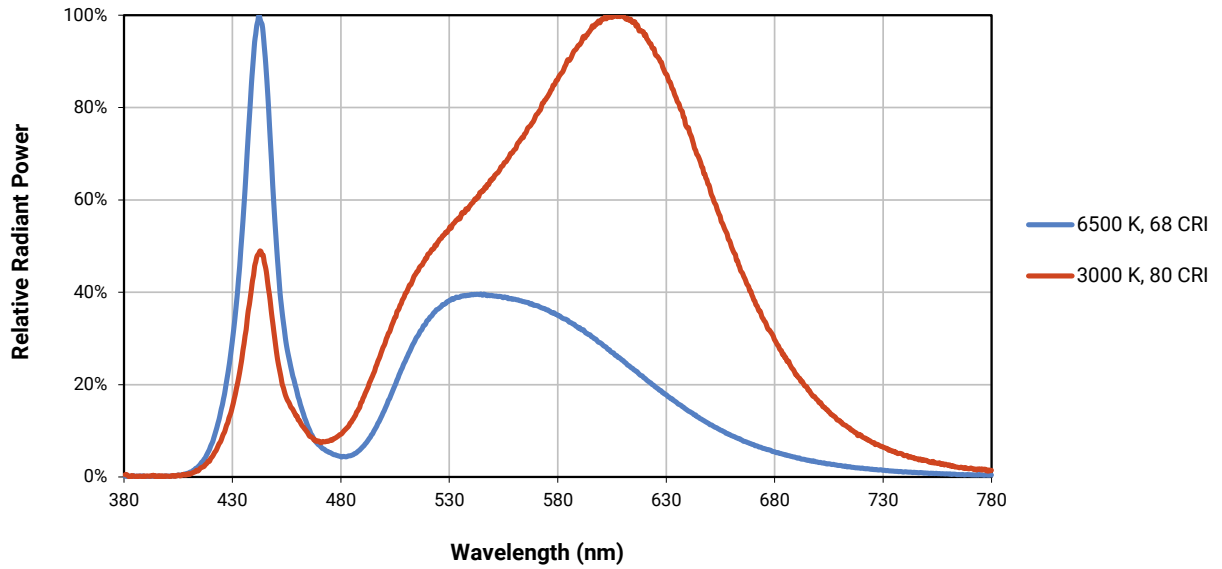


**RELATIVE FLUX VS. JUNCTION TEMPERATURE**



Reference condition: 6 V,  $I_F = 1400$  mA; 12 V,  $I_F = 700$  mA

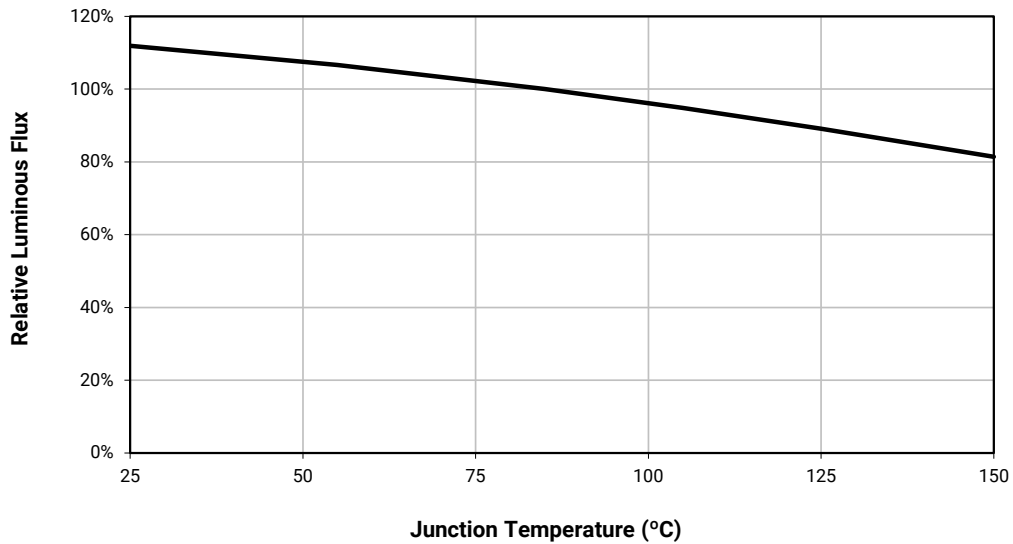



**ELECTRICAL CHARACTERISTICS ( $T_j = 85^\circ\text{C}$ )**

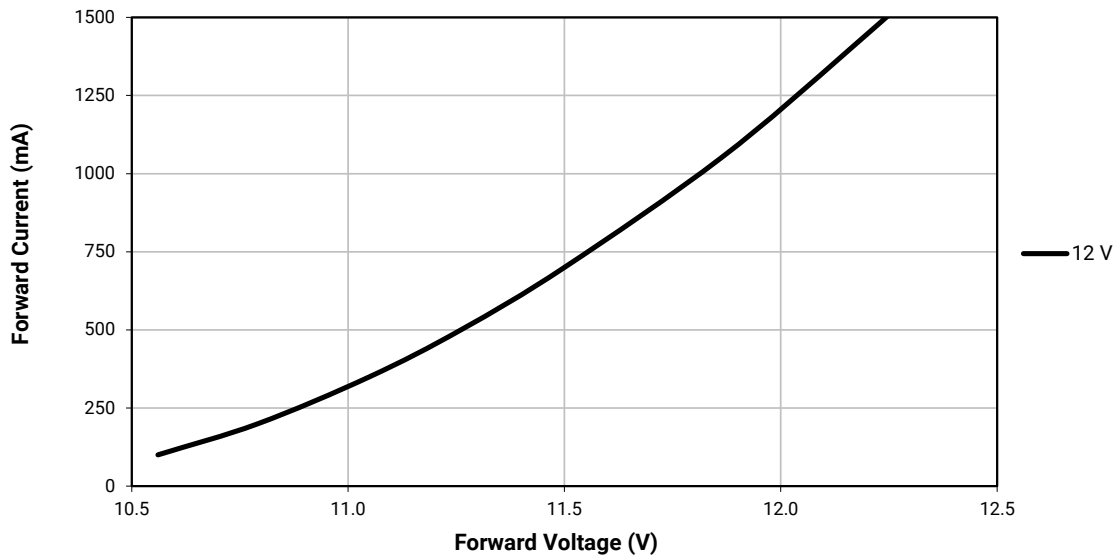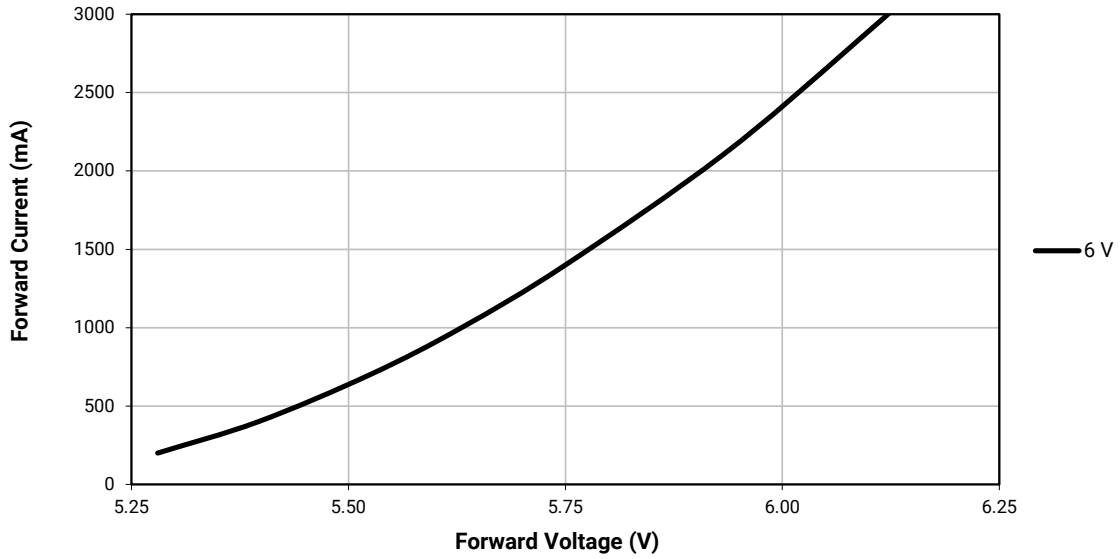

**RELATIVE FLUX VS. CURRENT ( $T_j = 85\text{ }^\circ\text{C}$ )**

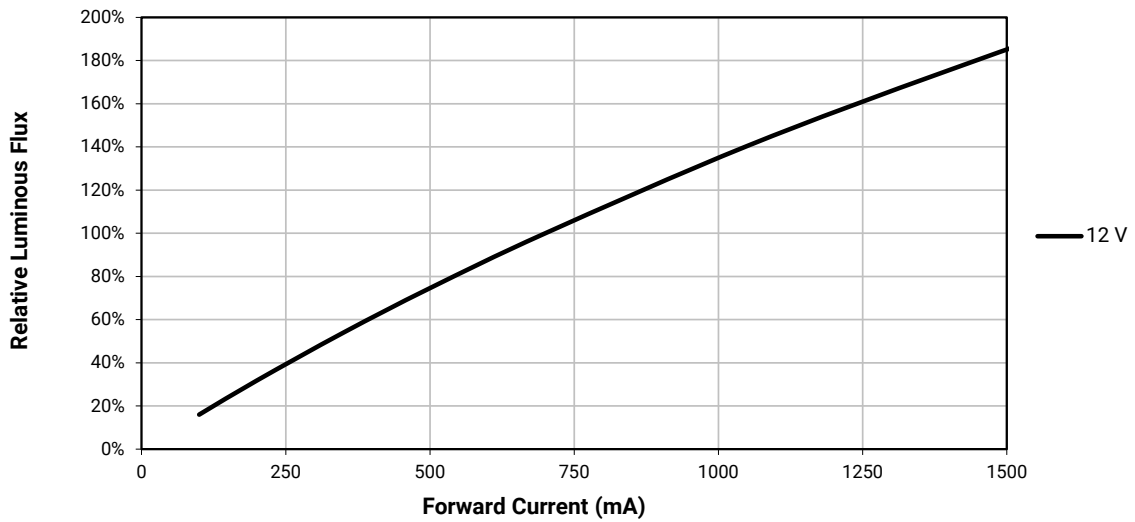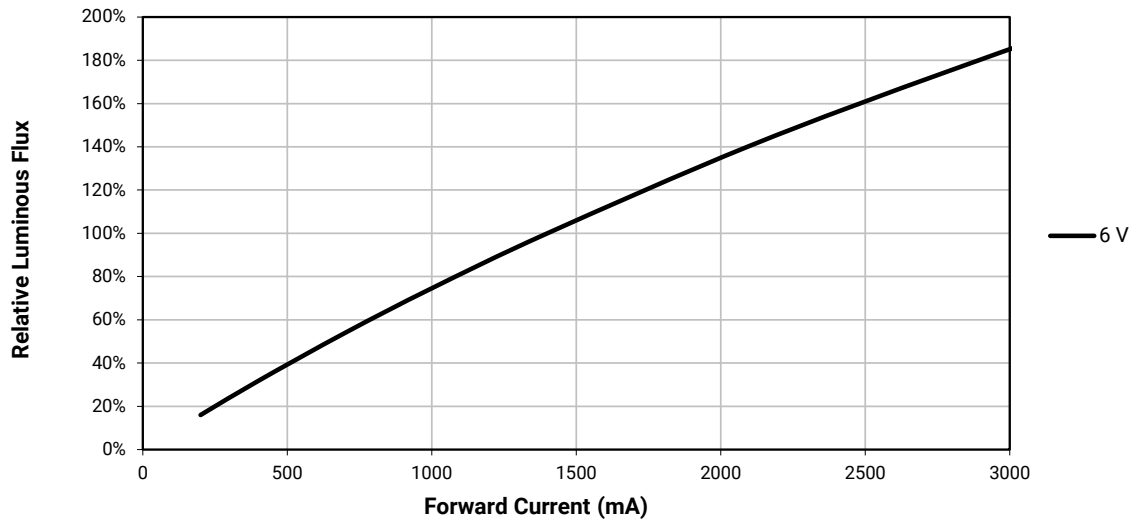


**RELATIVE CHROMATICITY VS CURRENT (WARM WHITE)**

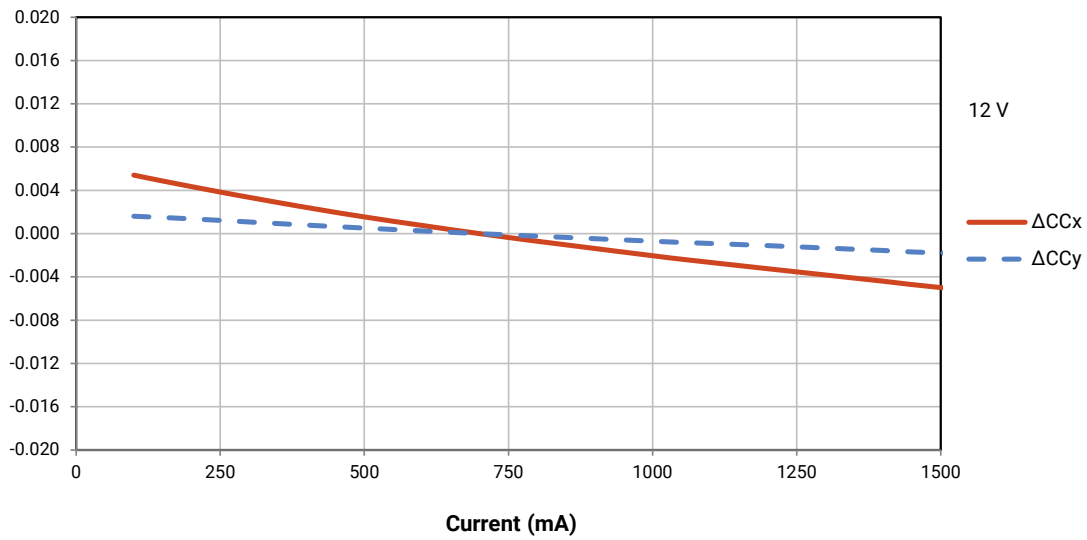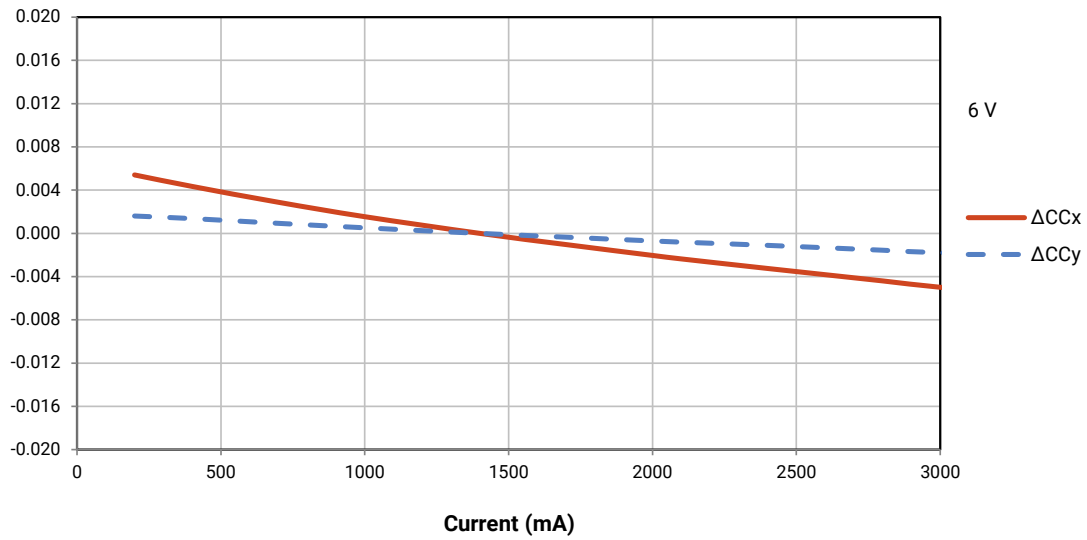


**RELATIVE CHROMATICITY VS TEMPERATURE (WARM WHITE)**

Reference condition: 6 V,  $I_F = 1400$  mA; 12 V,  $I_F = 700$  mA

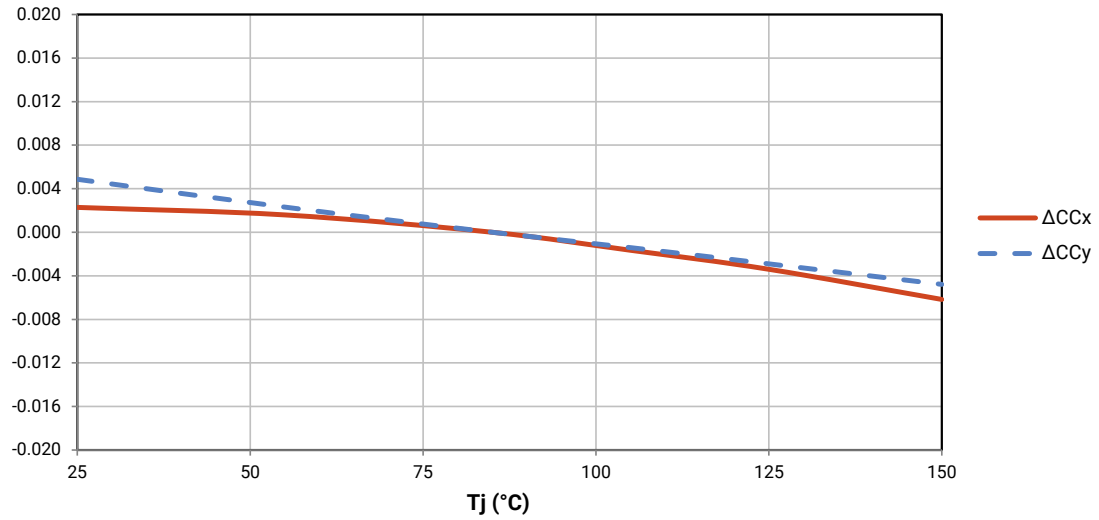



**TYPICAL SPATIAL DISTRIBUTION**

Reference condition:  $T_J = 85$  °C; 6 V,  $I_F = 1400$  mA; 12 V,  $I_F = 700$  mA

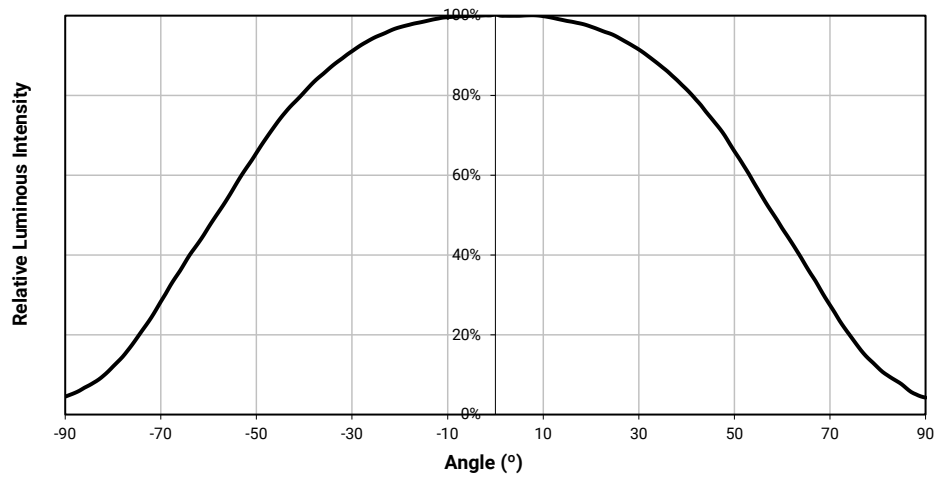

**THERMAL DESIGN**

The maximum forward current is determined by the thermal resistance between the LED junction and ambient. It is crucial for the end product to be designed in a manner that minimizes the thermal resistance from the solder point to ambient in order to optimize lamp life and optical characteristics.

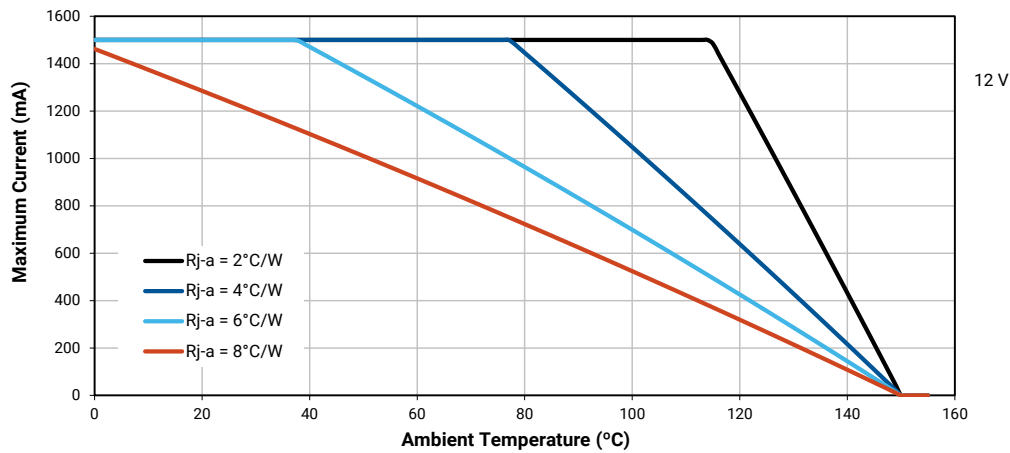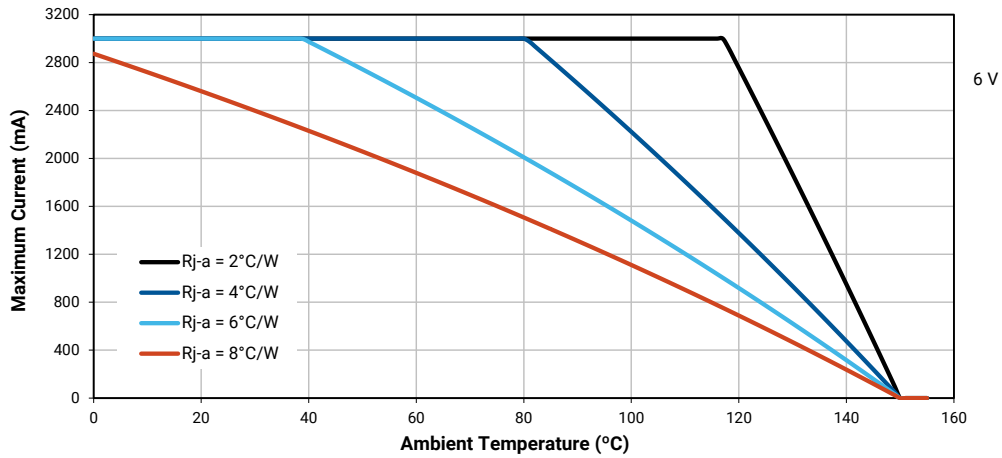



**PERFORMANCE GROUPS – LUMINOUS FLUX ( $T_j = 85\text{ °C}$ )**

XLamp XHP50 LEDs are tested for luminous flux and placed into one of the following luminous-flux groups.

| Group Code | Minimum Luminous Flux | Maximum Luminous Flux |
|------------|-----------------------|-----------------------|
| E4         | 635                   | 680                   |
| F2         | 680                   | 730                   |
| F4         | 730                   | 780                   |
| G2         | 780                   | 840                   |
| G4         | 840                   | 900                   |
| H2         | 900                   | 970                   |
| H4         | 970                   | 1040                  |
| J2         | 1040                  | 1120                  |
| J4         | 1120                  | 1200                  |

**PERFORMANCE GROUPS – CHROMATICITY**

XLamp XHP50 LEDs are tested for chromaticity and placed into one of the regions defined by the following bounding coordinates.

| EasyWhite Color Temperatures – 2-Step |        |        |        |
|---------------------------------------|--------|--------|--------|
| Bin Code                              | CCT    | x      | y      |
| 40H                                   | 4000 K | 0.3777 | 0.3739 |
|                                       |        | 0.3797 | 0.3816 |
|                                       |        | 0.3861 | 0.3855 |
|                                       |        | 0.3838 | 0.3777 |
| 35H                                   | 3500 K | 0.4022 | 0.3858 |
|                                       |        | 0.4053 | 0.3942 |
|                                       |        | 0.4125 | 0.3977 |
|                                       |        | 0.4091 | 0.3891 |
| 30H                                   | 3000 K | 0.4287 | 0.3975 |
|                                       |        | 0.4328 | 0.4064 |
|                                       |        | 0.4390 | 0.4086 |
|                                       |        | 0.4347 | 0.3996 |
| 27H                                   | 2700 K | 0.4524 | 0.4048 |
|                                       |        | 0.4574 | 0.4140 |
|                                       |        | 0.4633 | 0.4154 |
|                                       |        | 0.4581 | 0.4062 |

**PERFORMANCE GROUPS – CHROMATICITY (CONTINUED)**

| EasyWhite Color Temperatures – 3-Step Ellipse |        |              |        |            |            |                    |
|---|--------|--------------|--------|------------|------------|--------------------|
| Bin Code                                      | CCT    | Center Point |        | Major Axis | Minor Axis | Rotation Angle (°) |
|   |        | x            | y      | a          | b          |                    |
| 50G   | 5000 K | 0.3447       | 0.3553 | 0.00840    | 0.00312    | 65.0               |
| 45G   | 4500 K | 0.3611       | 0.3658 | 0.00852    | 0.00330    | 61.5               |
| 40G   | 4000 K | 0.3818       | 0.3797 | 0.00939    | 0.00402    | 53.7               |
| 35G   | 3500 K | 0.4073       | 0.3917 | 0.00927    | 0.00414    | 54.0               |
| 30G   | 3000 K | 0.4338       | 0.4030 | 0.00834    | 0.00408    | 53.2               |
| 27G   | 2700 K | 0.4577       | 0.4099 | 0.00834    | 0.00420    | 48.5               |

| EasyWhite Color Temperatures – 5-Step Ellipse |        |              |        |            |            |                    |
|---|--------|--------------|--------|------------|------------|--------------------|
| Bin Code                                      | CCT    | Center Point |        | Major Axis | Minor Axis | Rotation Angle (°) |
|   |        | x            | y      | a          | b          |                    |
| 50E   | 5000 K | 0.3447       | 0.3553 | 0.01400    | 0.00520    | 65.0               |
| 45E   | 4500 K | 0.3611       | 0.3658 | 0.01420    | 0.00550    | 61.5               |
| 40E   | 4000 K | 0.3818       | 0.3797 | 0.01565    | 0.00670    | 53.7               |
| 35E   | 3500 K | 0.4073       | 0.3917 | 0.01545    | 0.00690    | 54.0               |
| 30E   | 3000 K | 0.4338       | 0.4030 | 0.01390    | 0.00680    | 53.2               |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 7000 K          | 0A0      | 0.2950 | 0.2970 |
|                 |          | 0.2920 | 0.3060 |
|                 |          | 0.2984 | 0.3133 |
|                 |          | 0.3009 | 0.3042 |
|                 | 0B0      | 0.2920 | 0.3060 |
|                 |          | 0.2895 | 0.3135 |
|                 |          | 0.2962 | 0.3220 |
|                 |          | 0.2984 | 0.3133 |
|                 | 0C0      | 0.2984 | 0.3133 |
|                 |          | 0.2962 | 0.3220 |
|                 |          | 0.3028 | 0.3304 |
|                 |          | 0.3048 | 0.3207 |
|                 | 0D0      | 0.2984 | 0.3133 |
|                 |          | 0.3048 | 0.3207 |
|                 |          | 0.3068 | 0.3113 |
|                 |          | 0.3009 | 0.3042 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 7000 K          | 0R0      | 0.2980 | 0.2880 |
|                 |          | 0.2950 | 0.2970 |
|                 |          | 0.3009 | 0.3042 |
|                 |          | 0.3037 | 0.2937 |
|                 | 0S0      | 0.2895 | 0.3135 |
|                 |          | 0.2870 | 0.3210 |
|                 |          | 0.2937 | 0.3312 |
|                 |          | 0.2962 | 0.3220 |
|                 | 0T0      | 0.2962 | 0.3220 |
|                 |          | 0.2937 | 0.3312 |
|                 |          | 0.3005 | 0.3415 |
|                 |          | 0.3028 | 0.3304 |
|                 | 0U0      | 0.3037 | 0.2937 |
|                 |          | 0.3009 | 0.3042 |
|                 |          | 0.3068 | 0.3113 |
|                 |          | 0.3093 | 0.2993 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 7000 K          | 1A0      | 0.3048 | 0.3207 |
|                 |          | 0.3130 | 0.3290 |
|                 |          | 0.3144 | 0.3186 |
|                 |          | 0.3068 | 0.3113 |
|                 | 1B0      | 0.3028 | 0.3304 |
|                 |          | 0.3115 | 0.3391 |
|                 |          | 0.3130 | 0.3290 |
|                 |          | 0.3048 | 0.3207 |
|                 | 1C0      | 0.3115 | 0.3391 |
|                 |          | 0.3205 | 0.3481 |
|                 |          | 0.3213 | 0.3373 |
|                 |          | 0.3130 | 0.3290 |
|                 | 1D0      | 0.3130 | 0.3290 |
|                 |          | 0.3213 | 0.3373 |
|                 |          | 0.3221 | 0.3261 |
|                 |          | 0.3144 | 0.3186 |

**PERFORMANCE GROUPS – CHROMATICITY (CONTINUED)**

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 7000 K          | 1R0      | 0.3068 | 0.3113 |
|                 |          | 0.3144 | 0.3186 |
|                 |          | 0.3161 | 0.3059 |
|                 |          | 0.3093 | 0.2993 |
|                 | 1S0      | 0.3005 | 0.3415 |
|                 |          | 0.3099 | 0.3509 |
|                 |          | 0.3115 | 0.3391 |
|                 |          | 0.3028 | 0.3304 |
|                 | 1T0      | 0.3099 | 0.3509 |
|                 |          | 0.3196 | 0.3602 |
|                 |          | 0.3205 | 0.3481 |
|                 |          | 0.3115 | 0.3391 |
|                 | 1U0      | 0.3144 | 0.3186 |
|                 |          | 0.3221 | 0.3261 |
|                 |          | 0.3231 | 0.3120 |
|                 |          | 0.3161 | 0.3059 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 6000 K          | 2A0      | 0.3215 | 0.3350 |
|                 |          | 0.3290 | 0.3417 |
|                 |          | 0.3290 | 0.3300 |
|                 |          | 0.3222 | 0.3243 |
|                 | 2B0      | 0.3207 | 0.3462 |
|                 |          | 0.3290 | 0.3538 |
|                 |          | 0.3290 | 0.3417 |
|                 |          | 0.3215 | 0.3350 |
|                 | 2C0      | 0.3290 | 0.3538 |
|                 |          | 0.3376 | 0.3616 |
|                 |          | 0.3371 | 0.3490 |
|                 |          | 0.3290 | 0.3417 |
|                 | 2D0      | 0.3290 | 0.3417 |
|                 |          | 0.3371 | 0.3490 |
|                 |          | 0.3366 | 0.3369 |
|                 |          | 0.3290 | 0.3300 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 6000 K          | 2R0      | 0.3222 | 0.3243 |
|                 |          | 0.3290 | 0.3300 |
|                 |          | 0.3290 | 0.3180 |
|                 |          | 0.3231 | 0.3120 |
|                 | 2S0      | 0.3196 | 0.3602 |
|                 |          | 0.3290 | 0.3690 |
|                 |          | 0.3290 | 0.3538 |
|                 |          | 0.3207 | 0.3462 |
|                 | 2T0      | 0.3290 | 0.3690 |
|                 |          | 0.3381 | 0.3762 |
|                 |          | 0.3376 | 0.3616 |
|                 |          | 0.3290 | 0.3538 |
|                 | 2U0      | 0.3290 | 0.3300 |
|                 |          | 0.3366 | 0.3369 |
|                 |          | 0.3361 | 0.3245 |
|                 |          | 0.3290 | 0.3180 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 5000 K          | 3A0      | 0.3371 | 0.3490 |
|                 |          | 0.3451 | 0.3554 |
|                 |          | 0.3440 | 0.3427 |
|                 |          | 0.3366 | 0.3369 |
|                 | 3B0      | 0.3376 | 0.3616 |
|                 |          | 0.3463 | 0.3687 |
|                 |          | 0.3451 | 0.3554 |
|                 |          | 0.3371 | 0.3490 |
|                 | 3C0      | 0.3463 | 0.3687 |
|                 |          | 0.3551 | 0.3760 |
|                 |          | 0.3533 | 0.3620 |
|                 |          | 0.3451 | 0.3554 |
|                 | 3D0      | 0.3451 | 0.3554 |
|                 |          | 0.3533 | 0.3620 |
|                 |          | 0.3515 | 0.3487 |
|                 |          | 0.3440 | 0.3427 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 4500 K          | 4A0      | 0.3530 | 0.3597 |
|                 |          | 0.3615 | 0.3659 |
|                 |          | 0.3512 | 0.3465 |
|                 |          | 0.3515 | 0.3487 |
|                 | 4B0      | 0.3548 | 0.3736 |
|                 |          | 0.3641 | 0.3804 |
|                 |          | 0.3530 | 0.3597 |
|                 |          | 0.3533 | 0.362  |
|                 | 4C0      | 0.3641 | 0.3804 |
|                 |          | 0.3736 | 0.3874 |
|                 |          | 0.3702 | 0.3722 |
|                 |          | 0.3615 | 0.3659 |
|                 | 4D0      | 0.3615 | 0.3659 |
|                 |          | 0.3702 | 0.3722 |
|                 |          | 0.3670 | 0.3578 |
|                 |          | 0.3590 | 0.3521 |

**PERFORMANCE GROUPS – CHROMATICITY (CONTINUED)**


| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 4000 K          | 5A0      | 0.3670 | 0.3578 |
|                 |          | 0.3702 | 0.3722 |
|                 |          | 0.3825 | 0.3798 |
|                 |          | 0.3783 | 0.3646 |
|                 | 5B0      | 0.3702 | 0.3722 |
|                 |          | 0.3736 | 0.3874 |
|                 |          | 0.3869 | 0.3958 |
|                 |          | 0.3825 | 0.3798 |
|                 | 5C0      | 0.3825 | 0.3798 |
|                 |          | 0.3869 | 0.3958 |
|                 |          | 0.4006 | 0.4044 |
|                 |          | 0.3950 | 0.3875 |
|                 | 5D0      | 0.3783 | 0.3646 |
|                 |          | 0.3825 | 0.3798 |
|                 |          | 0.3950 | 0.3875 |
|                 |          | 0.3898 | 0.3716 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 3500 K          | 6A0      | 0.3889 | 0.3690 |
|                 |          | 0.3941 | 0.3848 |
|                 |          | 0.4080 | 0.3916 |
|                 |          | 0.4017 | 0.3751 |
|                 | 6B0      | 0.3941 | 0.3848 |
|                 |          | 0.3996 | 0.4015 |
|                 |          | 0.4146 | 0.4089 |
|                 |          | 0.4080 | 0.3916 |
|                 | 6C0      | 0.4080 | 0.3916 |
|                 |          | 0.4146 | 0.4089 |
|                 |          | 0.4299 | 0.4165 |
|                 |          | 0.4221 | 0.3984 |
|                 | 6D0      | 0.4017 | 0.3751 |
|                 |          | 0.4080 | 0.3916 |
|                 |          | 0.4221 | 0.3984 |
|                 |          | 0.4147 | 0.3814 |

| ANSI White Bins |          |        |        |
|-----------------|----------|--------|--------|
| CCT             | Bin Code | x      | y      |
| 3000 K          | 7A0      | 0.4147 | 0.3814 |
|                 |          | 0.4221 | 0.3984 |
|                 |          | 0.4342 | 0.4028 |
|                 |          | 0.4259 | 0.3853 |
|                 | 7B0      | 0.4221 | 0.3984 |
|                 |          | 0.4299 | 0.4165 |
|                 |          | 0.4430 | 0.4212 |
|                 |          | 0.4342 | 0.4028 |
|                 | 7C0      | 0.4342 | 0.4028 |
|                 |          | 0.4430 | 0.4212 |
|                 |          | 0.4562 | 0.4260 |
|                 |          | 0.4465 | 0.4071 |
|                 | 7D0      | 0.4259 | 0.3853 |
|                 |          | 0.4342 | 0.4028 |
|                 |          | 0.4465 | 0.4071 |
|                 |          | 0.4373 | 0.3893 |


**CREE'S STANDARD WHITE CHROMATICITY REGIONS PLOTTED ON THE 1931 CIE CURVE**

ANSI Cool White

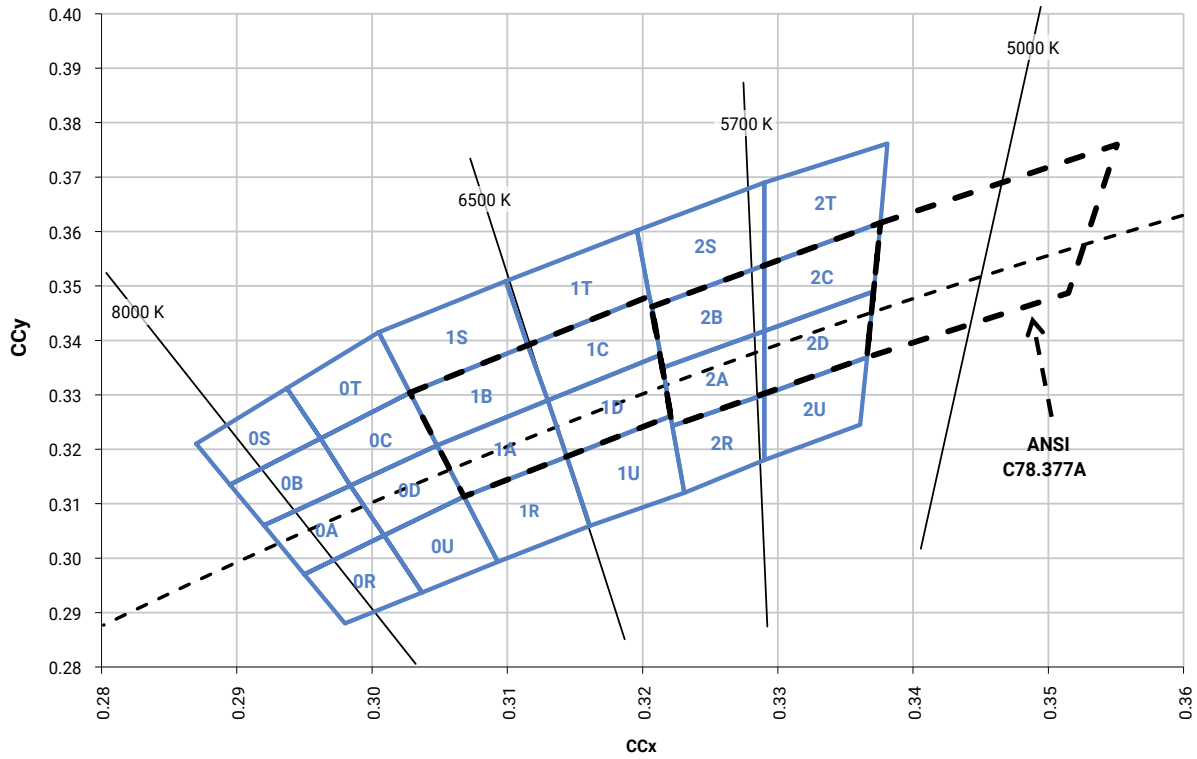


**CREE'S STANDARD WHITE CHROMATICITY REGIONS PLOTTED ON THE 1931 CIE CURVE - CONTINUED**


ANSI Neutral White and ANSI Warm White

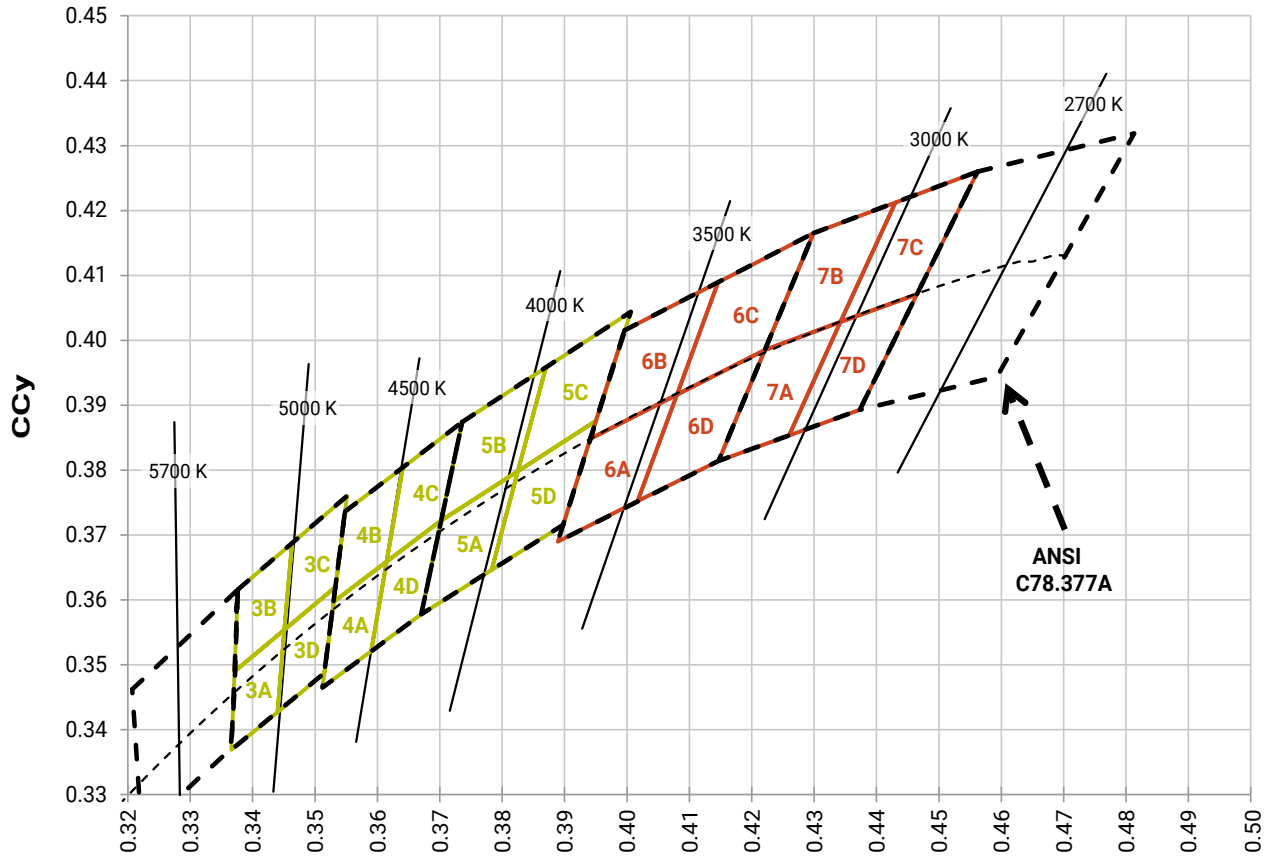

**CREE'S STANDARD WHITE CHROMATICITY REGIONS PLOTTED ON THE 1931 CIE CURVE - CONTINUED**

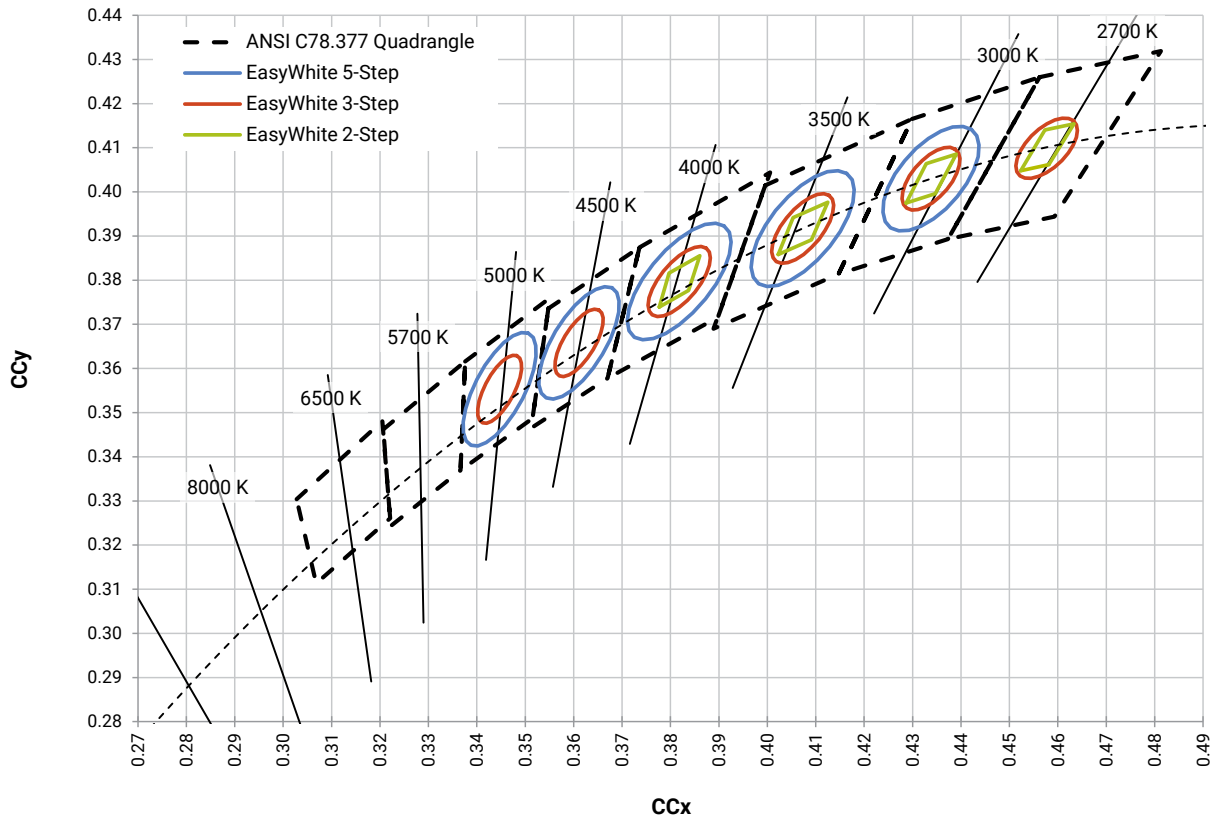


**CREE'S STANDARD COOL WHITE KITS PLOTTED ON ANSI STANDARD CHROMATICITY REGIONS**

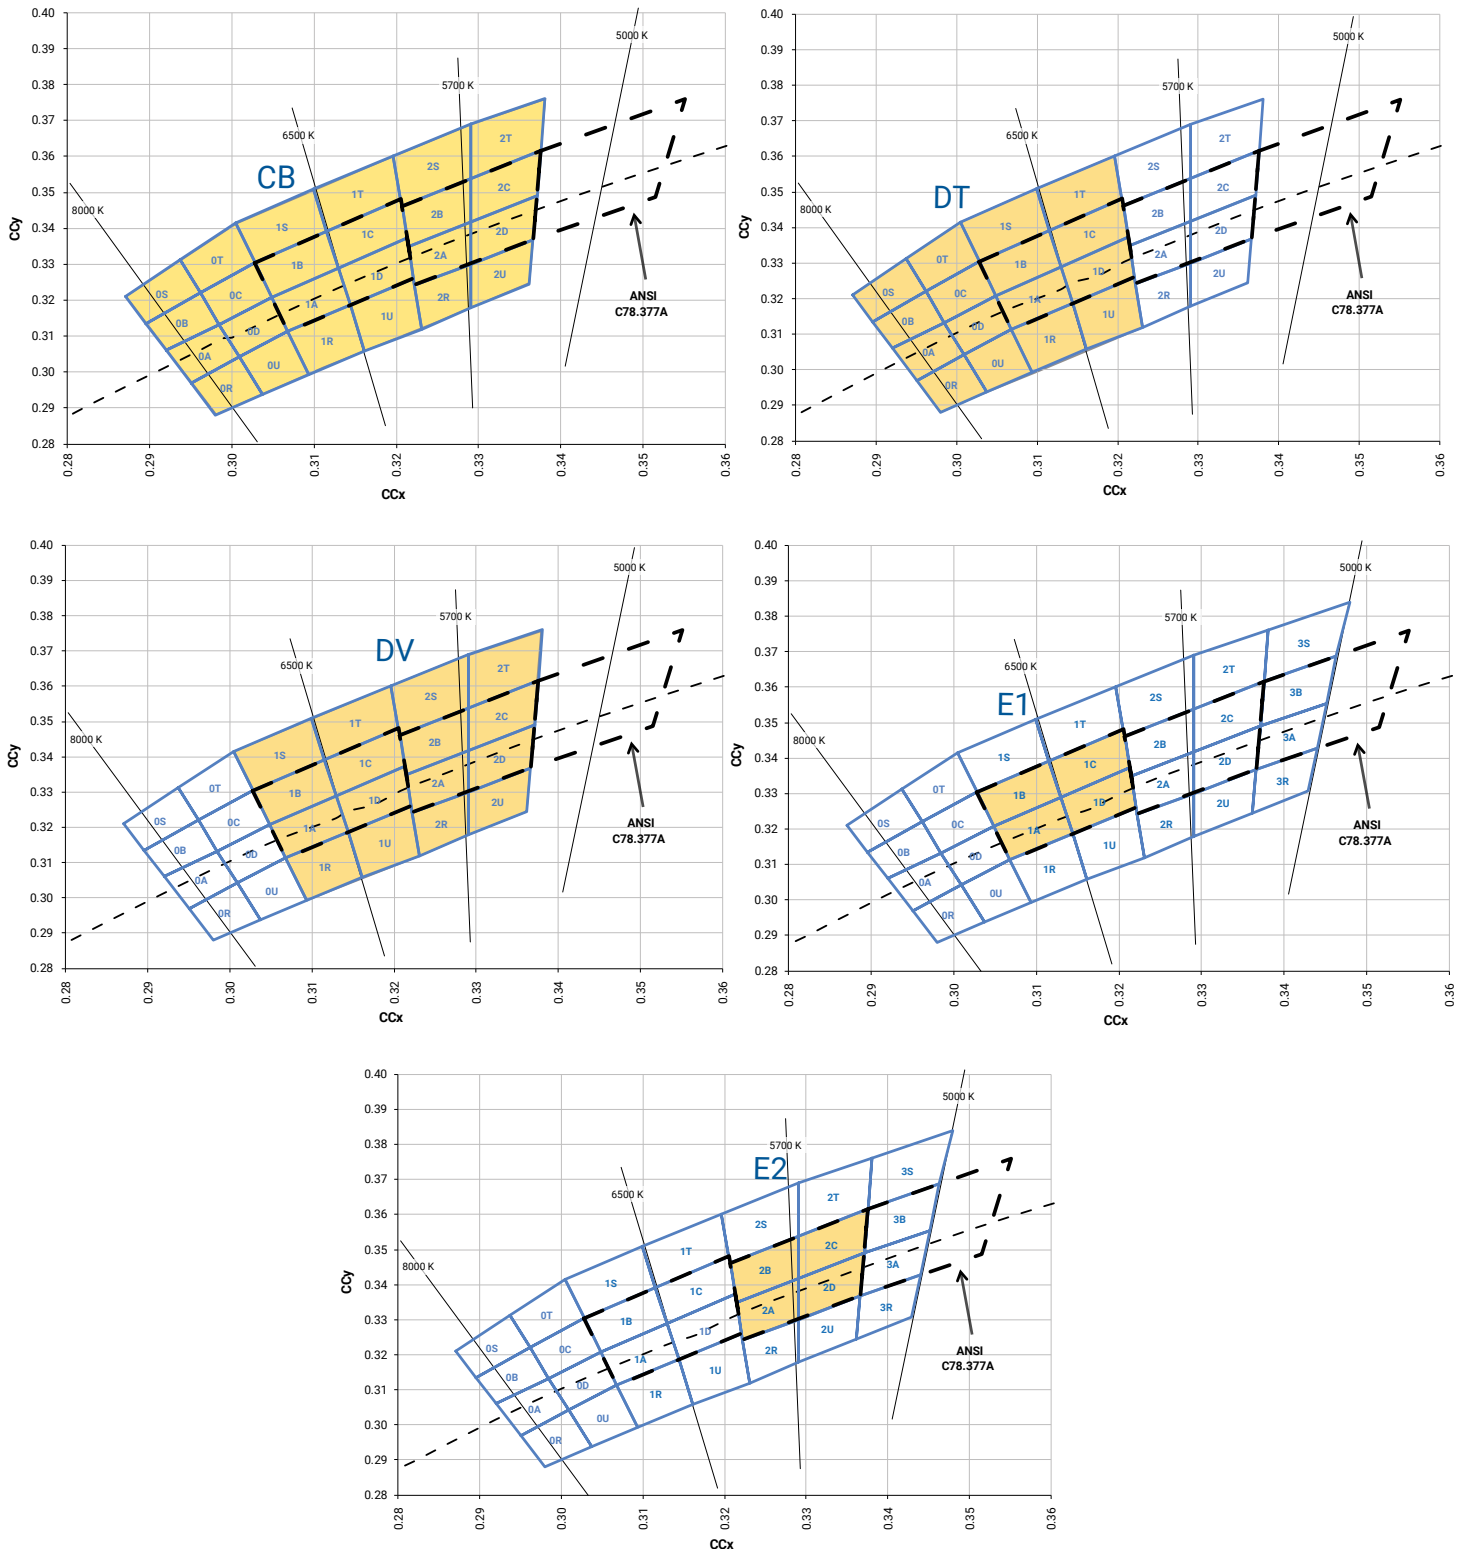




**CREE'S STANDARD WARM AND NEUTRAL WHITE KITS PLOTTED ON ANSI STANDARD CHROMATICITY REGIONS**

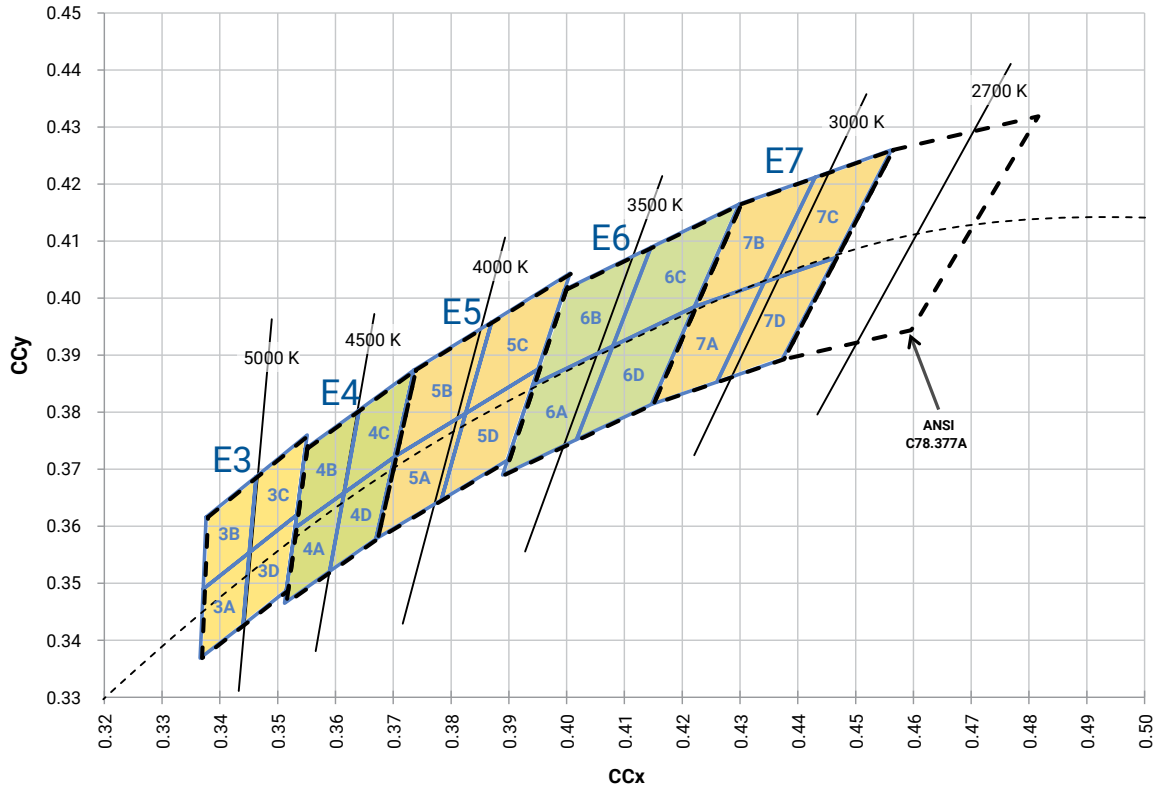

**BIN AND ORDER-CODE FORMATS**


Bin codes and order codes for XHP50 LEDs are configured in the following manner:

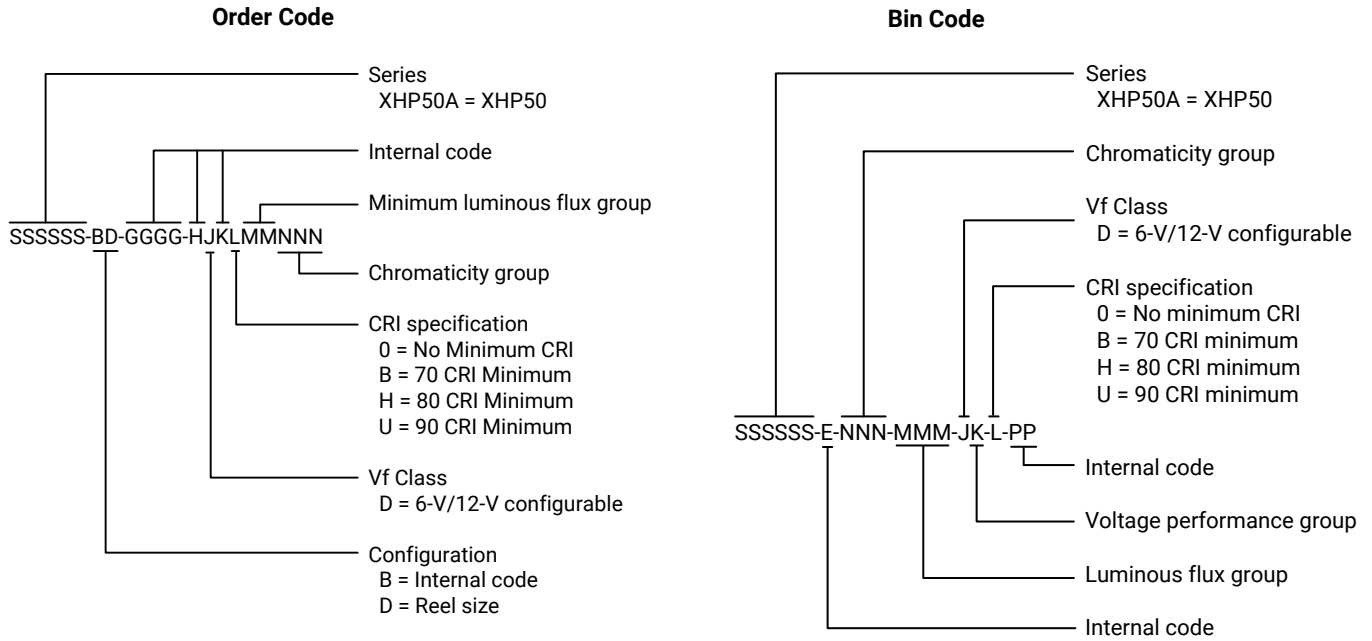

**REFLOW SOLDERING CHARACTERISTICS**

In testing, Cree has found XLamp XHP50 LEDs to be compatible with JEDEC J-STD-020C, using the parameters listed below. As a general guideline, Cree recommends that users follow the recommended soldering profile provided by the manufacturer of the solder paste used.

Note that this general guideline may not apply to all PCB designs and configurations of reflow soldering equipment.

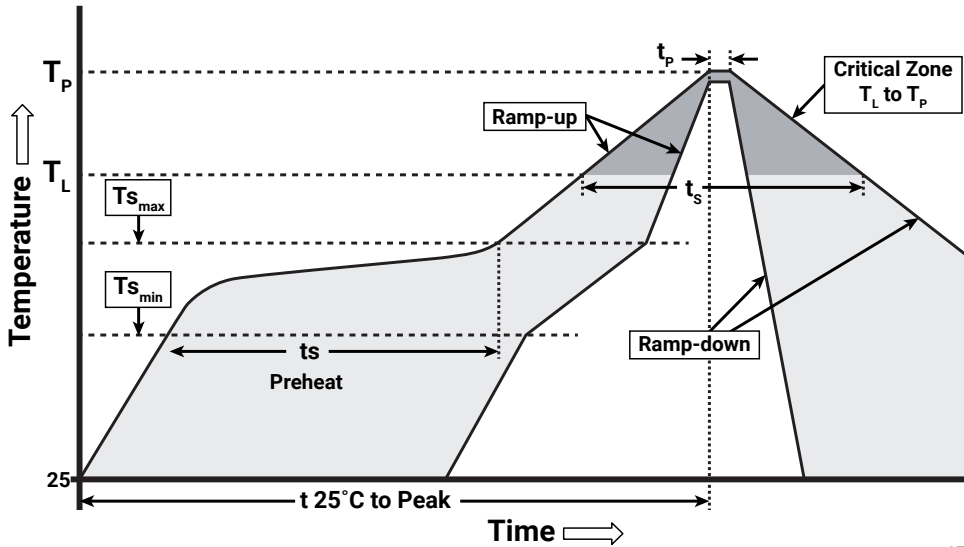

IPC/JEDEC J-STD-020C

| Profile Feature                                       | Lead-Free Solder |
|---|------------------|
| Average Ramp-Up Rate ( $T_{s_{max}}$ to $T_P$ )       | 1.2 °C/second    |
| Preheat: Temperature Min ( $T_{s_{min}}$ )            | 120 °C           |
| Preheat: Temperature Max ( $T_{s_{max}}$ )            | 170 °C           |
| Preheat: Time ( $t_{s_{min}}$ to $t_{s_{max}}$ )      | 65-150 seconds   |
| Time Maintained Above: Temperature ( $T_L$ )          | 217 °C           |
| Time Maintained Above: Time ( $t_s$ )                 | 45-90 seconds    |
| Peak/Classification Temperature ( $T_P$ )             | 235 - 245 °C     |
| Time Within 5 °C of Actual Peak Temperature ( $t_p$ ) | 20-40 seconds    |
| Ramp-Down Rate  | 1 - 6 °C/second  |
| Time 25 °C to Peak Temperature                        | 4 minutes max.   |

Note: All temperatures refer to the topside of the package, measured on the package body surface.

## NOTES

---

### Measurements

The luminous flux, radiant power, chromaticity, forward voltage and CRI measurements in this document are binning specifications only and solely represent product measurements as of the date of shipment. These measurements will change over time based on a number of factors that are not within Cree's control and are not intended or provided as operational specifications for the products. Calculated values are provided for informational purposes only and are not intended as specifications.

### Pre-Release Qualification Testing

Please read the [LED Reliability Overview](#) for details of the qualification process Cree applies to ensure long-term reliability for XLamp LEDs and details of Cree's pre-release qualification testing for XLamp LEDs.

### Lumen Maintenance

Cree now uses standardized IES LM-80-08 and TM-21-11 methods for collecting long-term data and extrapolating LED lumen maintenance. For information on the specific LM-80 data sets available for this LED, refer to the public [LM-80 results document](#).

Please read the [Long-Term Lumen Maintenance application note](#) for more details on Cree's lumen maintenance testing and forecasting. Please read the [Thermal Management application note](#) for details on how thermal design, ambient temperature, and drive current affect the LED junction temperature.

### Moisture Sensitivity

Cree recommends keeping XLamp LEDs in the provided, resealable moisture-barrier packaging (MBP) until immediately prior to soldering. Unopened MBPs that contain XLamp LEDs do not need special storage for moisture sensitivity.

Once the MBP is opened, XLamp XHP50 LEDs may be stored as MSL 1 per JEDEC J-STD-033, meaning they have unlimited floor life in conditions of  $\leq 30$  °C/85% relative humidity (RH). Regardless of the storage condition, Cree recommends sealing any unsoldered LEDs in the original MBP.

### RoHS Compliance

The levels of RoHS restricted materials in this product are below the maximum concentration values (also referred to as the threshold limits) permitted for such substances, or are used in an exempted application, in accordance with EU Directive 2011/65/EC (RoHS2), as implemented January 2, 2013. RoHS Declarations for this product can be obtained from your Cree representative or from the [Product Ecology](#) section of the Cree website.

### REACH Compliance

REACH substances of very high concern (SVHCs) information is available for this product. Since the European Chemical Agency (ECHA) has published notice of their intent to frequently revise the SVHC listing for the foreseeable future, please contact a Cree representative to insure you get the most up-to-date REACH SVHC Declaration. REACH banned substance information (REACH Article 67) is also available upon request.

**NOTES - CONTINUED**

---

**UL® Recognized Component**

Level 4 enclosure consideration. The LED package or a portion thereof has been investigated as a fire and electrical enclosure per ANSI/UL 8750.


**Vision Advisory**

WARNING: Do not look at an exposed lamp in operation. Eye injury can result. For more information about LEDs and eye safety, please refer to the [LED Eye Safety application note](#).


**MECHANICAL DIMENSIONS**

Thermal vias, if present, are not shown on these drawings.


All dimensions are  $\pm 0.13$  mm unless otherwise indicated.

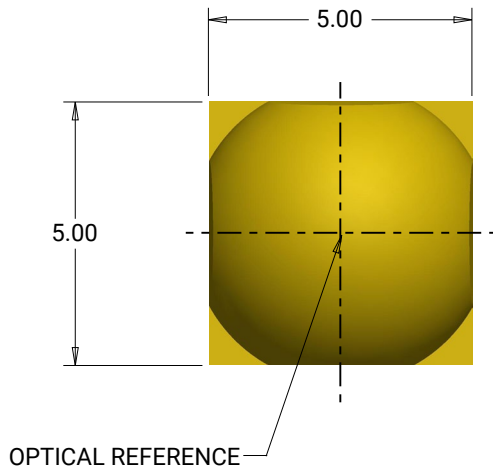


**Top View**

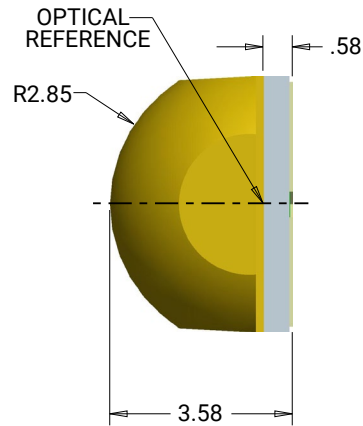

**Side View**

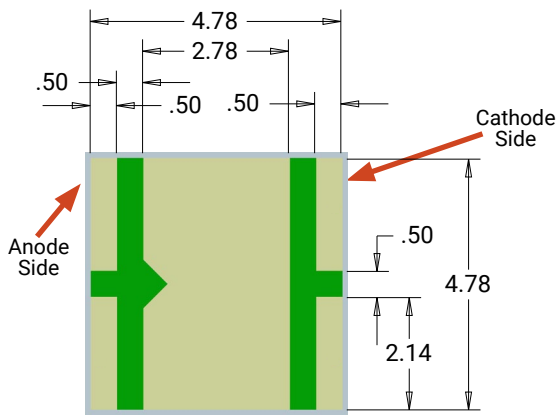


**Bottom View**

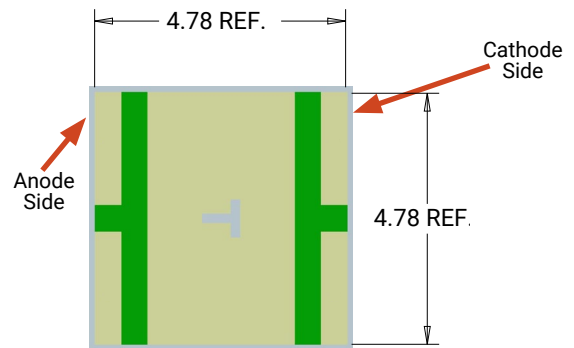


**Alternate Bottom View**

**As shown in these bottom views, thermal pad is electrically isolated**


**MECHANICAL DIMENSIONS - CONTINUED**

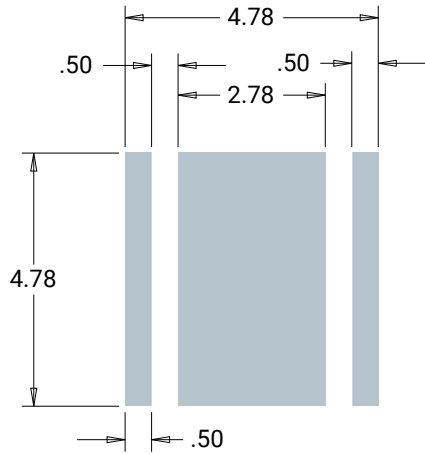

**Recommended PCB Solder Pad 6 V Configuration**  
(thermal pad is electrically isolated)

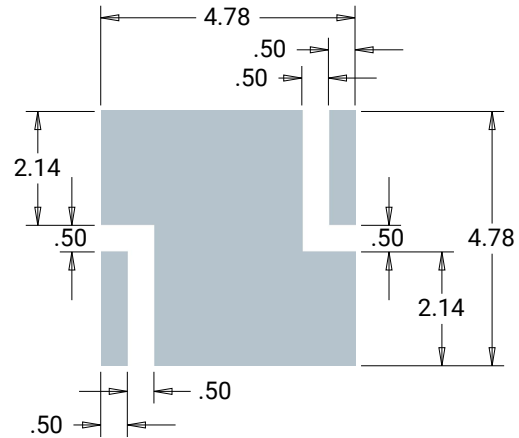


**Recommended PCB Solder Pad 12 V Configuration**  
(thermal pad is connected to anode and cathode and is not electrically isolated)

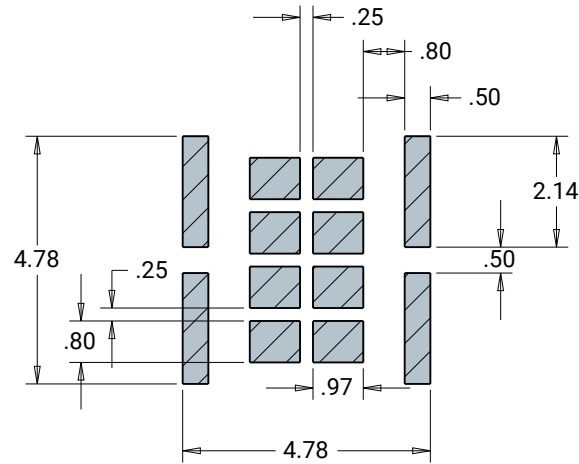

**Recommended Stencil Pattern**  
**6 V & 12 V Configurations**  
(shaded area is open)


**ELECTRICAL CONFIGURATION**

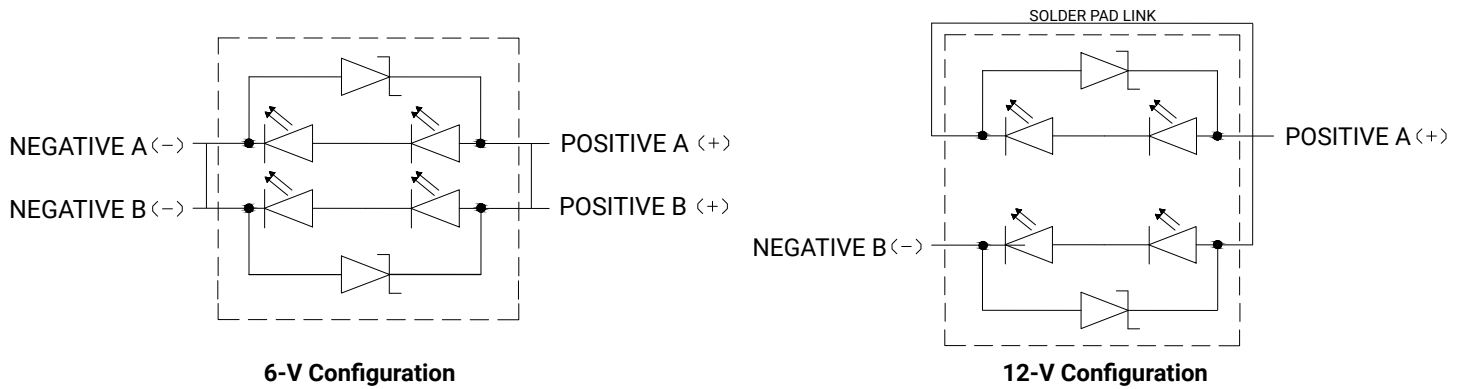

**TAPE AND REEL**

All Cree carrier tapes conform to EIA-481D, Automated Component Handling Systems Standard.


All dimensions are ±.13 mm unless otherwise indicated.

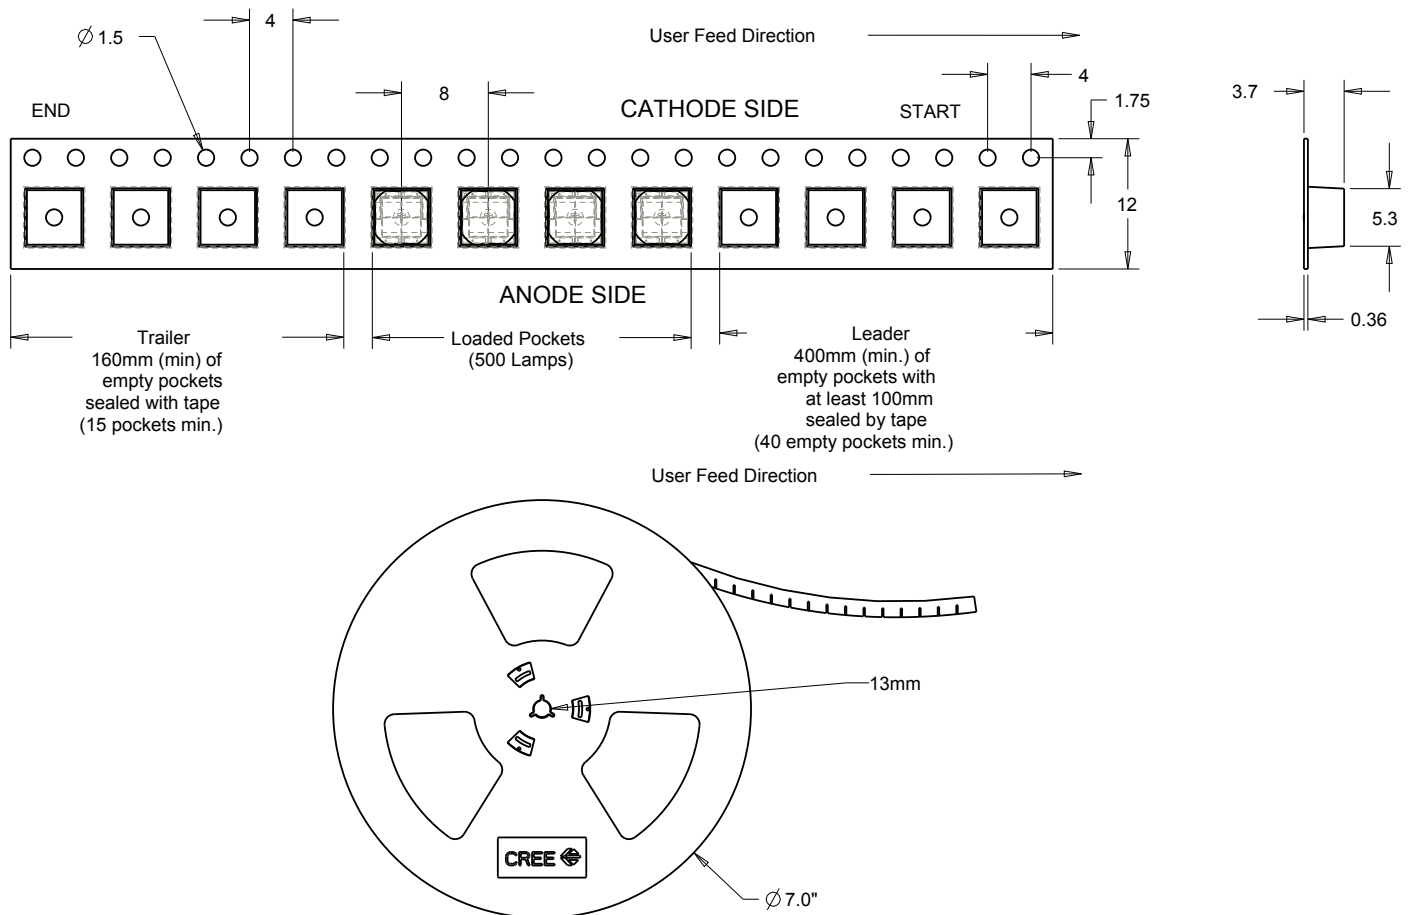




**PACKAGING**

**Unpackaged Reel**

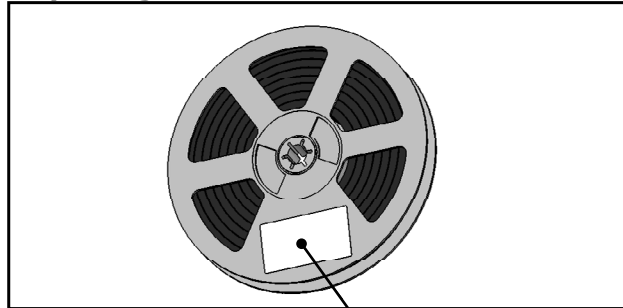

Label with Cree Bin Code,  
Quantity, Reel ID


**Packaged Reel**

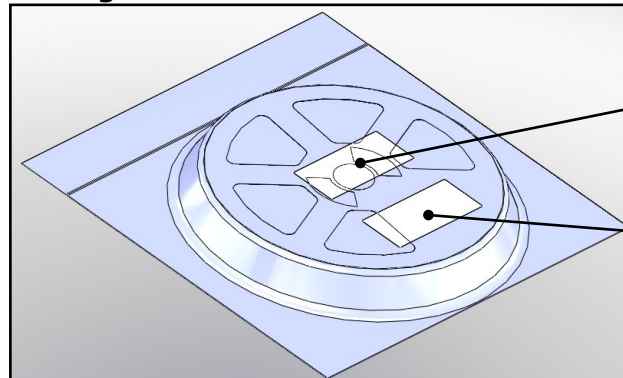

Label with Cree Order Code,  
Quantity, Reel ID, PO #

Label with Cree Bin Code,  
Quantity, Reel ID

**Boxed Reel**

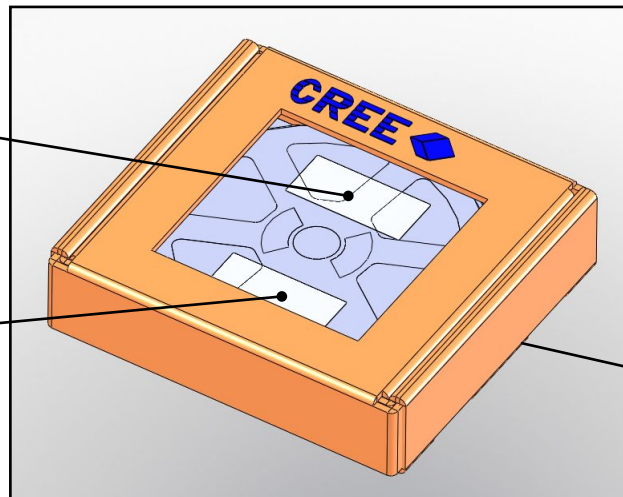

Label with Cree Order Code,  
Quantity, Reel ID, PO #

Label with Cree Bin Code,  
Quantity, Reel ID

Patent Label  
(on bottom of box)